

# FMB getstatus



Example:

Data Link: 0 GPRS: 1 Phone: 0 SIM: 0 OP: 24602 Signal: 5 NewSMS: 0 Roaming: 0  
SMSFull: 0 LAC: 1 Cell ID: 3055 NetType: 3 FwUpd:0

<b>Response details</b>	<b>Description</b>	<b>Example</b>
<b>Data Link</b>	Indicate module connection to server at the moment: 0 - Not connected 1 - Connected	Data Link: 0
<b>GPRS</b>	Indicate if GPRS is available at the moment	GPRS: 1
<b>Phone</b>	Voice Call status: 0 - Ready 1 - Unavailable 2 - Unknown 3 - Ringing 4 - Call in progress 5 - Asleep	Phone: 0
<b>SIM</b>	SIM Status: 0 - Ready 1 - PIN 2 - PUK 3 - PIN2 4 - PUK2	SIM: 0
<b>OP</b>	Connected to GSM Operator: numerical ID of operator	OP: 24602
<b>Signal</b>	GSM Signal Quality [0-5]	Signal: 5

<b>NewSMS</b>	Indicate if new message received	NewSMS: 0
<b>Roaming</b>	0 - Home Network 1 - Roaming	Roaming: 0
<b>SMSFull</b>	SMS storage is full? 0 - OK 1 - SMS storage is full	SMSFull: 0
<b>LAC</b>	GSM Tower Location Area Code	LAC: 1
<b>Cell ID</b>	GSM Tower Cell ID Code	Cell ID: 3055
<b>NetType</b>	Network type which device is connected: 0 - 3G 1 - GSM 2 - 4G 3 - CAT-M1 4 - CAT-NB1 99 - Unknown	NetType: 3
<b>FwUpd</b>	Firmware update status: 0 - device has been updated via FOTA WEB / Teltonika Configurator - 65536 - device hasn't been updated since it was turned ON	FwUpd: 0