

[https://wiki.teltonika-gps.com/view/FMB\\_setkey](https://wiki.teltonika-gps.com/view/FMB_setkey)

## FMB setkey



Set new or change current configuration keyword. If device is locked, keyword cannot be changed.

1. # - old keyword (if adding new keyword space).
2. # - new keyword.

Example:

New keyword (set):`setkey{space}{space}<newkeyword>`

Change keyword (change): `setkey{space}<oldkeyword>{space}<newkeyword>`

**Note!** At least 4 letters or numbers have to be used. Max length - 10.