

FMC130 LED status

[Main Page](#) > [Advanced Trackers](#) > [FMC130](#) > [FMC130 Manual](#) > **FMC130 LED status**

This section is an explanation of LED indications on an FMC130 device.

Navigation LED Indications

| Behaviour | Meaning |
|---------------------------------|---------------------------------------------------------------------------------------|
| Permanently switched on | GNSS signal is not received |
| Blinking every second | Normal mode, GNSS is working |
| Off | GNSS is turned off because: Device is not working or Device is in sleep mode |
| Blinking fast constantly | Device firmware is being flashed |

Status LED Indications

| Behaviour | Meaning |
|---------------------------------------|-------------------------------------------------------|
| Blinking every second | Normal mode |
| Blinking every two seconds | Sleep mode |
| Blinking fast for a short time | Modem activity |
| Off | Device is not working or Device is in boot mode |