

# FMC130 LED status

[Main Page](#) > [Advanced Trackers](#) > [FMC130](#) > [FMC130 Manual](#) > **FMC130 LED status**

This section is an explanation of LED indications on an FMC130 device.

## Navigation LED Indications

Behaviour	Meaning
<b>Permanently switched on</b>	GNSS signal is not received
<b>Blinking every second</b>	Normal mode, GNSS is working
<b>Off</b>	GNSS is turned off because: Device is not working or Device is in sleep mode
<b>Blinking fast constantly</b>	Device firmware is being flashed

## Status LED Indications

Behaviour	Meaning
<b>Blinking every second</b>	Normal mode
<b>Blinking every two seconds</b>	Sleep mode
<b>Blinking fast for a short time</b>	Modem activity
<b>Off</b>	Device is not working or Device is in boot mode