

FMC130 SMS/GPRS Commands

[Main Page](#) > [Advanced Trackers](#) > [FMC130](#) > [FMC130 Manual](#) > **FMC130 SMS/GPRS Commands**

Commands apply for these devices:

[FMB001](#) [FMB010](#) [FMB002](#) [FMB020](#) [FMB003](#) [FMB110](#) [FMB120](#) [FMB122](#) [FMB125](#) [FMB130](#) [FMB202](#) [FMB204](#) [FMB208](#) [FMB900](#) [FMB920](#) [FMB962](#) [FMB964](#) [FM3001](#) [FMT100](#) [FMC001](#) [FMC003](#) [FMC00A](#) [FMM001](#) [FMM003](#) [FMM00A](#) [FMC125](#) [FMC130](#) [FMM125](#) [FMM130](#) [FMU125](#) [FMU126](#) [FMU130](#) [MTB100](#) [FMB140](#)

All commands are case sensitive. When user tries to send SMS/GPRS message to device that operates in Deep Sleep mode, it cannot arrive to it because the GSM/GPRS module is disabled most of the time. Device will receive the SMS message when it exits Deep Sleep mode, but GPRS commands will not be received after exiting Deep Sleep Mode.

If the device is in GPS Sleep or Online Deep Sleep mode, sent SMS/GPRS message will arrive to the device.

SMS command structure:

<SMS login><space><SMS password><space><command><space><value>

SMS command [getinfo](#) example:

- If you have set SMS login and password: login pass getinfo
- If SMS login and password are not set leave two spaces before command: getinfo

GPRS commands require [Codec 12](#) protocol.

□

Contents

- [1 Commands apply for these devices:](#)
- [2 Common commands](#)
- [3 Bluetooth Commands](#)
- [4 Commands Related to Features](#)
- [5 OBD Commands](#)
- [6 CAN Adapter Commands](#)

To search for compatible products, [Expand all content](#)

Common commands

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

getinfo	Device runtime system information.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
getver	Returns code version, device IMEI, modem app version, RTC time, Init time, Uptime and BT MAC address.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
getstatus	Modem Status information.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands

getgps	Current GPS data, date and time.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
getio	Readout analog input,digital input and output.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
gps	Returns location information with Google maps link.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands

radio #	Returns IO status, # AVL ID.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
cpureset	Resets device	No	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
fwstats	Get data about FW and restarts	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands

getrecord	SMS command initiates saving and sending of high priority record.	No	<p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p>	Common commands
getimeiccid #	Response is sent to SMS/GPRS command sender and also to GSM number provided. # - GSM number using international format e.g. 37069012345	Yes	<p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p>	Common commands
getimsi	Sends the IMSI number of the SIM card inserted as a response to the sender. If two SIM cards are inserted in the device, the response will be the IMSI number of the currently active SIM card. Note: This command is supported from 03.10.02 firmware version.	Yes	<p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p> <p>FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250</p>	Common commands

getops	Returns list of all currently visible operators.	Yes	FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
allver	Responds with information about hardware and firmware versions and storage space	Yes	FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
getparam #	Returns selected parameter value. # - first ID value . # - second ID value . # - third ID value . SMS command is limited to 160 characters.	Yes	FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
getparam #;#;#...			FMBXXX FMB001 EMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	

setparam #:#	Sets selected parameter value [Parameter ID] : [New Parameter Value] ; [Parameter ID] : [New Parameter Value]... SMS command is limited to 160 characters.	Yes	Common commands	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250
setparam #:#;#:#;#;#...	Redirects device to other server. 1.# - IMEI. 2.# - APN. 3.# - LOGIN. 4.# - PASS. 5.# - IP. 6.# - PORT. 7.# - MODE (0-TCP/1-UDP).	Yes	Common commands	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250
countrecs	Returns records number.	Yes	Common commands	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250

web_connect	Forces device to connect to Fota WEB immediately.	Yes	<p>FMBXXX</p> <p>FMB001</p> <p>FMC001</p> <p>FMB010</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB150</p> <p>FMC150</p> <p>FMM150</p> <p>FMB900</p> <p>FMB920</p> <p>FMB202</p> <p>FMB204</p> <p>FMB206</p> <p>FMT100</p> <p>FMP100</p> <p>FMC001</p> <p>FMC125</p> <p>FMC130</p> <p>FMM001</p> <p>FMM125</p> <p>FMM130</p> <p>FMC800</p> <p>FMM800</p> <p>FMM80A</p> <p>FMC880</p> <p>FMM880</p> <p>FMC250</p> <p>FMBXXX</p> <p>FMB001</p> <p>FMC001</p> <p>FMB010</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB150</p> <p>FMC150</p> <p>FMM150</p> <p>FMB900</p> <p>FMB920</p> <p>FMB202</p> <p>FMB204</p> <p>FMB206</p> <p>FMT100</p> <p>FMP100</p> <p>FMC001</p> <p>FMC125</p> <p>FMC130</p> <p>FMM001</p> <p>FMM125</p> <p>FMM130</p> <p>FMC800</p> <p>FMM800</p> <p>FMM80A</p> <p>FMC880</p> <p>FMM880</p> <p>FMC250</p> <p>FMBXXX</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB900</p> <p>FMB910</p> <p>FMB920</p> <p>FMB962</p> <p>FMB964</p> <p>FMB202</p> <p>FMB204</p> <p>FMB209</p> <p>FMC125</p> <p>FMM125</p> <p>FMI125</p> <p>FMC130</p> <p>FMM130</p> <p>FMI130</p> <p>FMI126</p> <p>MSP500</p> <p>FMBXXX</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB900</p> <p>FMB910</p> <p>FMB920</p> <p>FMB962</p> <p>FMB964</p> <p>FMB202</p> <p>FMB204</p> <p>FMB209</p> <p>FMC125</p> <p>FMM125</p> <p>FMI125</p> <p>FMC130</p> <p>FMM130</p> <p>FMI130</p> <p>FMI126</p> <p>MSP500</p>	Common commands
deleterecords	Delete all records from SD card.	Yes	<p>FMBXXX</p> <p>FMB001</p> <p>FMC001</p> <p>FMB010</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB150</p> <p>FMC150</p> <p>FMM150</p> <p>FMB900</p> <p>FMB920</p> <p>FMB202</p> <p>FMB204</p> <p>FMB206</p> <p>FMT100</p> <p>FMP100</p> <p>FMC001</p> <p>FMC125</p> <p>FMC130</p> <p>FMM001</p> <p>FMM125</p> <p>FMM130</p> <p>FMC800</p> <p>FMM800</p> <p>FMM80A</p> <p>FMC880</p> <p>FMM880</p> <p>FMC250</p> <p>FMBXXX</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB900</p> <p>FMB910</p> <p>FMB920</p> <p>FMB962</p> <p>FMB964</p> <p>FMB202</p> <p>FMB204</p> <p>FMB209</p> <p>FMC125</p> <p>FMM125</p> <p>FMI125</p> <p>FMC130</p> <p>FMM130</p> <p>FMI130</p> <p>FMI126</p> <p>MSP500</p> <p>FMBXXX</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB900</p> <p>FMB910</p> <p>FMB920</p> <p>FMB962</p> <p>FMB964</p> <p>FMB202</p> <p>FMB204</p> <p>FMB209</p> <p>FMC125</p> <p>FMM125</p> <p>FMI125</p> <p>FMC130</p> <p>FMM130</p> <p>FMI130</p> <p>FMI126</p> <p>MSP500</p>	Common commands
setdigout ## Y1 Y2 Z1 Z2	<p>Set digital output.</p> <p>1.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT1.</p> <p>2.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT2.</p> <p>Y1 - timeout value for DOUT1 if needed (in seconds).</p> <p>Y2 - timeout value for DOUT2 if needed (in seconds).</p> <p>Z1 - maximum speed value for DOUT1 if needed.</p> <p>Z2 - maximum speed value for DOUT2 if needed.</p>	Yes	<p>FMBXXX</p> <p>FMB001</p> <p>FMC001</p> <p>FMB010</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB900</p> <p>FMB910</p> <p>FMB920</p> <p>FMB962</p> <p>FMB964</p> <p>FMB202</p> <p>FMB204</p> <p>FMB209</p> <p>FMC125</p> <p>FMM125</p> <p>FMI125</p> <p>FMC130</p> <p>FMM130</p> <p>FMI130</p> <p>FMI126</p> <p>MSP500</p> <p>FMBXXX</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB900</p> <p>FMB910</p> <p>FMB920</p> <p>FMB962</p> <p>FMB964</p> <p>FMB202</p> <p>FMB204</p> <p>FMB209</p> <p>FMC125</p> <p>FMM125</p> <p>FMI125</p> <p>FMC130</p> <p>FMM130</p> <p>FMI130</p> <p>FMI126</p> <p>MSP500</p>	Common commands
setindigout ### Y1 Y2 Y3	<p>Set digital output when ignition is off.</p> <p>1.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT1.</p> <p>2.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT2.</p> <p>3.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT3.</p> <p>Y1 - timeout value for DOUT1 if needed (in seconds).</p> <p>Y2 - timeout value for DOUT2 if needed (in seconds).</p> <p>Y3 - timeout value for DOUT3 if needed (in seconds).</p>	Yes	<p>FMBXXX</p> <p>FMB001</p> <p>FMC001</p> <p>FMB010</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB900</p> <p>FMB910</p> <p>FMB920</p> <p>FMB962</p> <p>FMB964</p> <p>FMB202</p> <p>FMB204</p> <p>FMB209</p> <p>FMC125</p> <p>FMM125</p> <p>FMI125</p> <p>FMC130</p> <p>FMM130</p> <p>FMI130</p> <p>FMI126</p> <p>MSP500</p> <p>FMBXXX</p> <p>FMB110</p> <p>FMB120</p> <p>FMB122</p> <p>FMB125</p> <p>FMB130</p> <p>FMB140</p> <p>FMB900</p> <p>FMB910</p> <p>FMB920</p> <p>FMB962</p> <p>FMB964</p> <p>FMB202</p> <p>FMB204</p> <p>FMB209</p> <p>FMC125</p> <p>FMM125</p> <p>FMI125</p> <p>FMC130</p> <p>FMM130</p> <p>FMI130</p> <p>FMI126</p> <p>MSP500</p>	Common commands

battery	Returns battery state info.	Yes	FMBXXX FMB001 FMC001 FMM001 FMB002 FMB003 FMB010 FMB020 FMB120 FMB122 FMB125 FMB130 FMB140 FMB910 FMB920 FMB962 FMB964 FMB202 FMB204 FMB208 FMB209 FMC125 FMM125 FMU125 FMU126 EMC130 FMM130 FMU130 MSP500 FMT100 FMP100 FMC800 FMM800 FMM80A FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
wdlog	Returns all information about 'watch dogs'	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
defaultcfg	Load default configuration.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands

			FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	
setkey # #	<p>Add new or change current configuration keyword. If device is locked, keyword cannot be changed.</p> <p>1.# - old keyword (if adding new keyword space). 2.# - new keyword.</p>	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
delkey #	<p>Remove existing keyword (If device is locked, keyword cannot be changed).</p> <p># - old keyword.</p>	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
bbread #	<p>Return black box information (HEX value of event ID and HEX value of custom data field (optional)).</p> <p># - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.</p>	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands

bbinfo #	Return same information as bbread command but additional all events timestamp is written in HEX. # - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands
sdformat	Format SD card.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Common commands

Bluetooth Commands

Command	Description	Response	HW Support	Parameter Group
btgetlist #	Returns requested Bluetooth list. # - 0,1 or 2 (0 - Discovered, 1 - Paired, 2 - Connected, 3 - Discovered BT4/BLE devices).	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Bluetooth commands

<i>btscan</i>	Starts Bluetooth scan.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Bluetooth commands
<i>btvisible #</i>	Sets Bluetooth to visible with TMO. # - visibility TMO (from 1 to 255 seconds).	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Bluetooth commands
<i>btrelease #</i>	Disconnects from current device and pauses auto connect functionality for TMO. # - none or TMO (from 1 to 255 seconds).	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Bluetooth commands

<i>btunpair #</i>	Unpair Bluetooth device. # - all, BT address (all - unpair all devices, BT address - unpair only specified MAC address).	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Bluetooth commands
-------------------	---	-----	---	--------------------

Commands Related to Features

- [FMBXXX FMB001](#)
- [FMC001](#)
 - [FMB010](#)
 - [FMB110](#)
 - [FMB120](#)
 - [FMB122](#)
 - [FMB125](#)
 - [FMB130](#)
 - [FMB140](#)
 - [FMB150](#)
 - [FMC150](#)
 - [FMM150](#)
 - [FMB900](#)
 - [FMB920](#)
 - [FMB202](#)
 - [FMB204](#)
 - [FMB206](#)
 - [FMT100](#)
 - [FMP100](#)
 - [FMC001](#)
 - [FMC125](#)
 - [FMC130](#)
 - [FMM001](#)
 - [FMM125](#)
 - [FMM130](#)
 - [FMC800](#)
 - [FMM800](#)
 - [FMM80A](#)
 - [FMC880](#)
 - [FMM880](#)
 - [FMC250](#)

Command	Description	Response	HW Support	Parameter Group
fc_reset	Resets fuel consumption parameters.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features
towingreact	Towing reactivation.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features
auto_calibrate:get	Returns the state of calibration.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features
odomet:#	Set total odometer value. # - new odometer value in km.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features

odoget	Display current odometer value.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features
go2sleep	Puts device to sleep ignoring going to sleep condition and stays asleep for the set time. Note: This command is supported from 03.27.10.Rev.482 firmware version.	Yes	FMB965 FMB930 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features
on_demand_trackingX	X=0 - Stops Tracking on Demand functionality. X=1 - Starts Tracking on Demand functionality. X=2 - Generates one high priority record and initiates data sending to server. Note: This command is supported from 03.25.06 firmware version.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features

OBD Commands

Command	Description	Response	HW Support	Parameter Group
obdinfo	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays all available information from OBD.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands

faultcodes	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays all visible fault codes.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands
<i>cleardtc</i>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Command clears all vehicle stored fault codes.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands
<i>getvin</i>	Command works on OBD trackers with data reading capabilities (FMX00Y). On other trackers it works only if connected with Bluetooth OBD dongle. Response displays vehicle VIN code.	Yes	FMBXXX FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands

CAN Adapter Commands

}}}

Command

Description

Response

HW Support

Parameter Group

lvcansetprog #	Set program number to CAN Adapter # - three to five digit vehicle specific number	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcangetprog	Get program number from CAN Adapter	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcangetinfo	Get information about connected CAN adapter	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcansimpletacho #	Add or remove simpletacho start byte. # - 0 or 1 (0 - don't add start byte, 1 - add start byte).	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanclear #	Clear Total Mileage (counted), Engine Work Time (counted), Fuel Consumed (counted) parameters values. # - parameter (0 - Engine work time (counted), 1 - Fuel Consumed (counted), 2 - Vehicle Mileage (counted)).	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanfaultcodes	Read DTC fault codes.	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanopenalldoors	Toggle CAN-CONTROL to open [unlock] all doors	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanclosealldoors	Toggle CAN-CONTROL to close [lock] all doors	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanopentruunk	Toggle CAN-CONTROL to open [unlock] trunk	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanblockengine	Toggle CAN-CONTROL to block vehicle engine (if command is not supported, please, visit FAQ)	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands

lvcannunblockengine	Toggle CAN-CONTROL to unblock vehicle engine (if command is not supported, please, visit FAQ)	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanturninglights	Toggle CAN-CONTROL to flash lights One flash of all turn lights ordered through accidental / blinking turn light switch	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanhorn	Toggle CAN-CONTROL to activate single horn sound	Yes	FMBXXX FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcansetting#,#	<p>This command is used to set specific counters for vehicles. From that moment of setting the value, vehicle will continue to count from the specified value.</p> <p>1.#: 0 - setting total engine work time (seconds) 1 - setting total mileage of the vehicle (km) 2 - resetting total fuel consumption to 0 is available (liters) 3 - setting total CNG use (kg) 4 - setting electric engine work time (seconds) 5 - setting wheel speed sensor impulses (impulses) 2.# - value(0 to 0xFFFFFFFF or ? (? - is used to get the current setting value))</p> <p>Note: This command is supported from 03.25.15.Rev.145 firmware version.</p>	Yes	FMB140	CAN Adapter Commands
lvcanrefresh	<p>This command forces FMB1YX connection to FOTA WEB to report current CAN adapter status.</p> <p>Note: This command is supported from 03.25.16.Rev.281 firmware version.</p>	Yes	FMB140	CAN Adapter Commands
lvcanreset	<p>This command forces CAN adapter reset.</p> <p>Note: This command is supported from 03.25.16.Rev.281 firmware version.</p>	Yes	FMB140	CAN Adapter Commands
lvcancheck	<p>This command reports CAN lines connection information.</p> <p>Note: This command is supported from 03.25.16.Rev.281 firmware version.</p>	Yes	FMB140	CAN Adapter Commands