

FMC13A SMS/Call settings

[Main Page](#) > [Advanced Trackers](#) > [FMC13A](#) > [FMC13A Manual](#) > [FMC13A Configuration](#) > **FMC13A SMS/Call settings**



Contents

- [1 SMS Data Sending](#)
- [2 SMS commands](#)

SMS Data Sending

These settings allow sending AVL data using binary SMS. AVL data will be sent by SMS only when there is no GPRS connection. This setting does not affect replies to SMS request messages - answers are always sent back to the sender's telephone number.

The screenshot displays the FMC13A configuration web interface. At the top, there is a navigation bar with the Teltonika logo and several action buttons: 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. On the right side of the navigation bar, there is a device information box showing 'IMEI 352000000000000', 'FW 01.00.00 Rev:00', and 'Configuration 1.00.0.0'. The main content area is divided into three sections: 'SMS Data Sending', 'SMS Commands', and 'Incoming Call Settings'. The 'SMS Data Sending' section has a toggle for 'Allow SMS Data Sending' (currently set to 'Disable') and a 'Data Send Number' input field. The 'SMS Commands' section has 'Login' and 'Password' input fields and an 'SMS Event Time Zone' dropdown menu set to 'UTC+00:00'. The 'Incoming Call Settings' section has a toggle for 'Incoming Call Action' (currently set to 'Do Nothing') and a 'Report Position' button. To the right of these sections are two tables: 'Authorized Numbers' and 'GSM Predefined Numbers', both with 20 rows and 'Import CSV'/'Export CSV' buttons at the bottom. A left sidebar contains a menu with various configuration categories like 'Status', 'Security', 'System', 'GPRS', 'Data Acquisition', 'SMS \ Call Settings', 'GSM Operators', 'Features', 'Accelerometer Features', 'Auto Geofence', 'Manual Geofence', 'Trip \ Odometer', 'Bluetooth', 'Bluetooth 4.0', '1-Wire', 'I/O', 'OBD II', and 'CAN Adapter'. At the bottom of the interface, there are social media icons and a settings gear icon.

SMS commands

Essential fields in *SMS/Call settings* are *Login* and *Password*. The login and password are used with every SMS sent to FMC13A. If login and password are not set, in every SMS sent to FMC13A device two spaces before command have to be used (<space><space><command>).

Command structure with set login and password:

<login><space><password><space><command>, for example: "asd 123 getgps"

Phone numbers have to be written in international standard, using "+" is optional but not necessary (in both cases number will be recognized, but when number is without "+" symbol, IDD Prefix will not be generated, which depends on location of the phone). If no numbers are entered, configuration and sending commands over SMS are allowed from all GSM numbers.