

FMC230 Security info

[FMC230 Configuration](#) > **FMC230 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- If two SIM cards are inserted into the device, user can change PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMC230 Security info interface. At the top, there are several action buttons: Load from device, Save to device, Update firmware, Reset configuration, Load from file, Save to file, Read records, and Reboot device. A SIM card icon and IMEI information are also visible. The main content area is divided into sections: Device Info, GNSS Info, GSM Info, I/O Info, and Maintenance. The Device Info section shows fields for Device Name, Last Start Time, Power Voltage, Ext Storage (used/total), Battery Voltage, Firmware Version, RTC Time, Device IMEI, Device Uptime, and Internal Battery Status. The GNSS Info section is further divided into GNSS Status, Satellites, and Location. GNSS Status shows Module Status (ON), GNSS Packets (32), and Fix Status (No fix). Satellites are divided into Visible and In Use, with columns for GPS, GLONASS, BeiDou, and Galileo. Location data includes Latitude/Longitude, Altitude, HDOP, Speed, Angle, and PDOP.

*Please note that This feature will only show up in configurator when device is connected to a computer.