

# FMC650 Security info

[Main Page](#) > [Professional Trackers](#) > [FMC650](#) > [FMC650 Configuration](#) > **FMC650 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- If two SIM cards are inserted into the device, user can change PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

**TELTONIKA**

Load from device | Save to device | Update firmware | Reset configuration | Load from file | Save to file | Read records | Reboot device

IMEI: 350631020010000  
FW: 03.25.15 Rev: 1.0  
Configuration: 6.1.17.0

### Device Info

|                   |                           |                 |                          |                         |
|-------------------|---------------------------|-----------------|--------------------------|-------------------------|
| Device Name       | Last Start Time           | Power Voltage   | Ext Storage (used/total) | Battery Voltage         |
|                   | 31/12/2003 06:00:18 p. m. | 17105 mV.       | 0 / 122 MB <b>Format</b> | 0 mV.                   |
| Firmware Version  | RTC Time                  | Device IMEI     | Device Uptime            | Internal Battery Status |
| 03.25.15 Rev: 1.0 | 31/12/2003 06:01:05 p. m. | 350631020010000 | 00:00:47                 | Not Charging 0%         |

### GNSS Info

GNSS Info | GSM Info | I/O Info | Maintenance

#### GNSS Status

|               |              |
|---------------|--------------|
| Module Status | GNSS Packets |
| ON            | 32           |
| Fix Status    | Fix Time     |
| No fix        | 00:00:00     |

#### Satellites

| Visible:      |         | In Use:      |         |
|---------------|---------|--------------|---------|
| GPS           | GLONASS | GPS          | GLONASS |
| 4             | 0       | 0            | 0       |
| BeiDou        | Galileo | BeiDou       | Galileo |
| 0             | 0       | 0            | 0       |
| Total In View |         | Total In Use |         |
| 4             |         | 0            |         |

#### Location

|                    |          |      |
|--------------------|----------|------|
| Latitude/Longitude | Altitude | HDOP |
| 0,0                | 0        | 0    |
| Speed              | Angle    | PDOP |
| 0 km/h             | 0°       | 0    |

\*Please note that This feature will only show up in configurator when device is connected to a computer.