

# FMC880 Security info

[Main Page](#) > [Fast & Easy Trackers](#) > [FMC880](#) > [FMC880 Configuration](#) > **FMC880 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the 'Security' section of the Teltonika FMC880 configurator. The top navigation bar includes buttons for 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. The main content area is divided into several sections:

- Device Info:** Displays key device parameters:

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB <b>Format</b>	0 mV.
Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 10%	31/12/2003 06:01:05 p. m.	35663300301303	00:00:47	Not Charging 0%
- GNSS Info:** Shows GNSS Status (Module Status ON, GNSS Packets 32, Fix Status No fix, Fix Time 00:00:00) and Satellites (Visible and In Use tables for GPS, GLONASS, BeiDou, Galileo). The Location section displays Latitude/Longitude, Altitude, HDOP, Speed, Angle, and PDOP.

\*Please note that This feature will only show up in configurator when device is connected to a computer.