

FMM003 Security info

[Main Page](#) > [OBD Trackers](#) > [FMM003](#) > [FMM003 Configuration](#) > **FMM003 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika configurator's Security section. The interface is divided into a sidebar on the left and a main content area. The sidebar contains navigation buttons for various system settings. The main content area features a top toolbar with actions like 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. Below the toolbar, the 'Device Info' section provides details such as 'Device Name', 'Last Start Time', 'Power Voltage', 'Ext Storage (used/total)', and 'Battery Voltage'. The 'GNSS Info' section is active, showing 'GNSS Status' (Module Status ON, GNSS Packets 32, Fix Status No fix, Fix Time 00:00:00), 'Satellites' (Visible and In Use counts for GPS, GLONASS, BeiDou, and Galileo), and 'Location' (Latitude/Longitude, Altitude, HDOP, Speed, Angle, PDOP). The top right corner of the interface displays the IMEI, FW version (03.25.15 Rev: 1.0), and Configuration version (6.1.17.0).

*Please note that This feature will only show up in configurator when device is connected to a computer.