

FMM00A SMS/Call settings

[Main Page](#) > [OBD Trackers](#) > [FMM00A](#) > [FMM00A Configuration](#) > **FMM00A SMS/Call settings**

SMS Data Sending

These settings allow sending AVL data using binary SMS. AVL data will be sent by SMS only when there is no GPRS connection. This setting does not affect replies to SMS request messages – answers are always sent back to the sender's telephone number.

The screenshot shows the 'SMS \ Call Settings' page of the FMM00A configuration tool. The interface has a blue header with the 'TELTONIKA' logo and a navigation menu on the left. The main content area is divided into several sections: 'SMS Data Sending' with 'Allow SMS Data Sending' (Disable/Enable buttons) and a 'Data Send Number' field; 'SMS Commands' with 'Login' and 'Password' fields and an 'SMS Event Time Zone' dropdown; and 'Incoming Call Settings' with 'Incoming Call Action' (Do Nothing, Hang-up, Report Position buttons). On the right, there are two tables: 'Authorized Numbers' and 'GSM Predefined Numbers', both with 20 rows and 'Import CSV'/'Export CSV' buttons at the bottom. The bottom of the page features social media icons and a settings gear.

SMS commands

Essential fields in *SMS/Call settings* are *Login* and *Password*. The login and password are used with every SMS sent to FMM00A. If login and password are not set, in every SMS sent to FMM00A device two spaces before command have to be used (<space><space><command>).

Command structure with set login and password:

<login><space><password><space><command>, for example: "asd 123 getgps"

Phone numbers have to be written in international standard, using "+" is optional but not necessary (in both cases number will be recognized, but when number is without "+" symbol, IDD Prefix will not be generated, which depends on location of the phone). If no numbers are entered, configuration and sending commands over SMS are allowed from all GSM numbers.