


FMM150 Status info

[Main Page](#) > [CAN Trackers & Adapters](#) > [FMM150](#) > [FMM150 Manual](#) > [FMM150 Configuration](#) > **FMM150 Status info**



Contents

- [1 Device Info](#)
- [2 GNSS Info](#)
- [3 HDOP/PDOP value calculation changes](#)
- [4 GSM Info](#)
- [5 I/O Info](#)
- [6 FMS I/O Info](#)
- [7 Tachograph Data Info](#)
- [8 Maintenance](#)
- [9 LLS Calibration](#)
- [10 OBD Info](#)

Status info enables the user to monitor real time information of FMB1YX. Following fields are displayed: **Device Info**, **GNSS Info**, **GSM Info**, **I/O Info**, **Maintenance** and etc. User is able to export all of the information to **.HTML** file using  icon which is at the top right corner of the **Device Info** area.

Device Info

- Device Name
- Firmware version
- Last Start Time - last device start time.
- RTC Time - real-time clock or current device time.
- Power Voltage (mV)
- Device IMEI
- External Storage (used/total) - Internal Flash memory free space.
- Device Uptime - device uptime from last start time.
- Battery Voltage (mV)
- Internal Battery Status - Charging/Not Charging

GNSS Info


- GNSS status
 - Module status - ON, [GPS Sleep](#), [Deep Sleep](#), [Online Deep Sleep](#), [Ultra Deep Sleep](#) mode.
 - GNSS packets - the number of GNSS packets the device received from startup.
 - Fix Status - Fix/No Fix. (**Note: Fix time strongly depends on indoor/outdoor location. To achieve best performance acquiring GNSS fix device should be used in outdoor locations**)
 - Fix Time - the last GNSS fix time.
- Satellites

- Visible - the number and type of satellites that are visible.
- In Use - the number of satellites used for location positioning.
- Location
 - Latitude/Longitude - shows current device coordinates and if you press them opens **Object location** window with a map.
 - Altitude, Angle
 - HDOP, PDOP

FMM150 sends HDOP/PDOP value to the server in precision of dilution **coefficient**. HDOP/PDOP calculation depends on how many [GNSS sources](#) are selected. If configured GNSS Source options are "GPS" and "GLONASS" and HDOP/PDOP values are received from both systems, the parameters HDOP/PDOP will be calculated as shown below:

"GPS" - 1.60;
 "GLONASS" - 1.60;
 "Galileo" - will be 0, because it is not selected and not taken into account;
 "BeiDou" - will be 0, because it is not selected and not taken into account;
 Calculation formula - ("GPS" + "GLONASS" + "Galileo" + "BeiDou") / 4 (four GNSS systems).
 Calculated HDOP/PDOP value according to above parameters - (1.60 + 1.60 + 0 + 0) / 4 = 0.8 coefficient.
 - Speed - current device speed.

HDOP/PDOP value calculation changes

From firmware version 03.27.06.Rev.01 HDOP/PDOP value calculation has been removed. DOP values are taken from GPGSA messages. DOP values are calculated  according to constellations that are currently in use. Example: If we have 4 GNSS systems and there will be two in use then average will be calculated from two GNSS systems.

Main calculations of separate HDOP/PDOP values of GPS, GLONASS, Galileo and BeiDou are made by GNSS modem. GNSS Modem already outputs average of HDOP/PDOP from 4 GNSS systems (Used satellites) with a formula below.

Calculation formula - ("GPS" + "GLONASS" + "Galileo (0-sat)" + "BeiDou (0-sat)") / 2 (four GNSS systems)**

Calculation formula - ("GPS" + "GLONASS") / 2 (two GNSS systems)

HDOP/PDOP will be different if it will have 19 and i.e. other packet with 6 satellites. In parsed regular AVL packet example below all of 19 satellites are shown as in use.

Parsed NMEA Record Example:

Record GPS longitude : -14116383
 Record GPS latitude : 530738950
 Record GPS altitude : 356

Record GPS angle : 357
Record GPS satellites: 19
Record GPS Kmh : 102

GSM Info

- GSM status
 - Modem Status
 - SIM State - Ready/Unknown
 - GPRS Status - Activated/Deactivated
 - Actual Operator Code
 - Signal Level
- GPRS traffic
 - Sent Data - the amount of data that has been sent by the device.
 - Received Data - the amount of data that has been received by the device.
 - Total Traffic - Sent Data + Received Data
- Sockets information:
 - Type - AVL Data Sending
 - Socket - Closed or Server domain and port which is used when sending AVL Data via TCP/UDP.
- Records
 - Sent Records count - how many records were sent to the server since the last data reset.
 - Last Record Send - date and time when the last record was sent.
 - Last Server Response Time - date and time when the last server response was.
- SMS Count
 - Received SMS - the amount of SMS messages the device has received.
 - Sent SMS - the amount of SMS responses that were sent from the device.
 - SMS Count - Received SMS + Sent SMS

I/O Info

- I/O Data - shows the current values from all configurable I/O elements.

FMS I/O Info

- FMS I/O Data - shows the current values from FMS configurable I/O elements.

Tachograph Data Info

- Tachograph Data - shows the current values from Tachograph Data configurable I/O elements.

Maintenance

- Log/Dump
 - Log - after button is pressed, the device starts log capturing for 10 minutes with configuration download. After this time device .log and configuration .cfg will be in compressed archive.

Archive name: YYYY_MM_DD_HH_MM_SS_FMB1YX_IMEI_Log.zip

Default directory: C:\Users\\Documents

GNSS Info | GSM Info | I/O Info | **Maintenance**

Log / Dump
Log
Dump

Accelerometer
Read

DOUT
DOUT 1 OFF

LLS calibration
Available sensors
Analog Input 1

Fuel, L.	Value, mV
0	0
0	0
0	0
0	0

Add row | Clear rows

a0	-∞
a1	NaN
a2	NaN
a3	NaN

Calculate | Export

- Dump - after button is pressed, the device starts to download .dmp logs and configuration .cfg from device in compressed archive.

Archive name: YYYY_MM_DD_HH_MM_SS_FMB1YX_IMEI_Dump.zip

Default directory: C:\Users\\Documents


Dump files can be read only with special software. If needed, provide these files to your Teltonika sales manager or Teltonika Support team.

- Open directory - this button appears near **Log** or **Dump** if one of these functions were used.
- Accelerometer - after the button is pressed, the device starts to capture accelerometer values for 1 second.

LLS Calibration

- LLS calibration - in this section you can calculate calibration values of Analog LLS sensors for AVL server - create a polynomial which is needed to convert sensor values to liters:
 - Table is filled row by row. Each row represents one fuel tank fill. To calculate constants it is needed to select a sensor from „Available sensors“, and fill the „Fuel, L.“ column and capture the current value of a sensor by clicking the "Refresh" button. Then the next value in liters should be entered by the user and so on.
 - When a table is filled, calculated a0, a1, a2, and a3 values should be seen.
 - To add a new tank fill row click "Add row". To remove the row click the "minus" button near the row you want to clear. To Clear all the rows click "Clear rows".
 - By clicking "Export" data will be exported to .csv file.
 - To recalculate the polynomial click on "Calculate" button.



Default log capture time, accelerometer capture time and files directories can be changed by pressing  icon at the bottom right corner.

OBD Info

Shows the main OBD parameters with current values when the device is connected to the vehicle via OBDII socket or using [OBDII Bluetooth® Dongle](#).

Note: not all parameters which are displayed in the "*OBD Info*" tab can be readable from the vehicle.