

# FMM640 Network settings

[Main Page](#) > [EOL Products](#) > [FMM640](#) > [FMM640 Configuration](#) > **FMM640 Network settings**



## Contents

- [1 Network settings](#)
- [2 LTE bands](#)
- [3 Operator connection](#)

## Network settings

**TELTONIKA** Load from file Save to file

Security  
System  
GPRS  
**Network Settings**  
Data Acquisition  
SMS \ Call Settings  
SMS Events  
GSM Operators  
Features  
Accelerometer Features  
Auto Geofence  
Manual Geofence Settings  
Manual Geofence Zones  
Trip \ Odometer  
Bluetooth 4.0  
Beacon List  
iButton List  
I/O  
LVCAN  
FMS IO  
Manual CAN IO  
Tachograph Data  
RS232 \ RS485  
CAN \ Tachograph  
ContiPressureCheck  
Custom scenarios  
Mobileye  
Reefer IO  
TK Transcom IO  
TK Touchprint IO

**NetworkTSettings**

Network mode

Auto	2G
4G	

IOT Network mode

CAT-M1	NB-IOT
CAT-M1 & NB-IOT	

Band selection mode

Auto	Manual
------	--------

**Advanced Bands**

LTE bands

LTE B1	LTE B2
LTE B3	LTE B4
LTE B5	LTE B8
LTE B12	LTE B13
LTE B18	LTE B19
LTE B20	LTE B26
LTE B28	LTE B39

## Network Settings


A device with external Quectel BG96 modem is named FMMxxx.

Quectel BG96 has different connection sequence from firmware side compared to other modems.

Network settings method is called on these occasions:

1. The modem is initialized.
2. The configuration has changed.
3. Periodically every 60 seconds after startup.

On each network, settings call changes are checked. The firmware sends configuration commands when they change. The on-device startup, all these commands are always sent as we don't know whether they have changed.

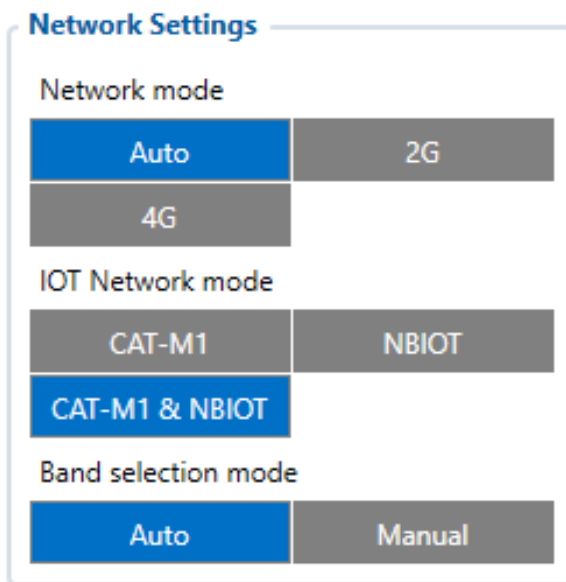

## LTE bands

Quectel BG96 modem has 14 LTE network bands. According to Quectel, each band can take up to 5 minutes to scan. To improve scan speed geographic bands have been implemented.

Geographic bands are functionality that sets (changes) configuration bands according to the device's GPS location. Functionality is only active when band selection mode is "Auto". It is run from network settings method (see above).

### Bands by location

Location	Abrevation	Bands set
<b>the United States of America</b>	US	B2 B4 B12 B13
<b>Europe</b>	EU	B3 B8 B20
<b>Korea</b>	KR	B3 B5
<b>Australia</b>	AU	B3 B28
<b>The Middle East</b>	ET	B3 B8 B28

**Japan**

JP

B1 B8 B18 B19

**China**

CH

B1 B3 B5 B8 B26 B39

#### Advanced Bands

##### LTE bands

LTE B1	LTE B2
LTE B3	LTE B4
LTE B5	LTE B8
LTE B12	LTE B13
LTE B18	LTE B19
LTE B20	LTE B26
LTE B28	LTE B39

## Operator connection

The device saves to memory last seen operator and its' network type. When there is no operator attached, the device tries to attach to the last seen operator on 4G IoT network mode. If the connection fails, the device clears last seen operator from memory and starts a new operator search. The same sequence happens when the preferred operator is given (configured), but instead of clearing the operator, the device each time connecting first tries to connect to preferred operator.