

# FMM80A Features settings

[Main Page](#) > [Fast & Easy Trackers](#) > [FMM80A](#) > [FMM80A Configuration](#) > **FMM80A Features settings**



## Contents

- [1 Eco/Green Driving](#)
  - [1.1 Data output](#)
  - [1.2 Auto calibration](#)
- [2 Over Speeding](#)
- [3 GNSS Fuel Counter](#)
- [4 Ignition ON Counter](#)

## Eco/Green Driving

Eco/Green Driving	
Scenario Settings	
<input checked="" type="radio"/> Disable	<input type="radio"/> Low Priority
<input type="radio"/> High Priority	<input type="radio"/> Panic Priority
Max Acceleration (m/s <sup>2</sup> )	<input type="text" value="2,5"/>
Max Braking (m/s <sup>2</sup> )	<input type="text" value="2,7"/>
Max Cornering (rad/s)	<input type="text" value="3,4"/>
Source	
<input checked="" type="radio"/> GPS	<input type="radio"/> Accelerometer
Advanced Eco Driving	
<input checked="" type="radio"/> Disable	<input type="radio"/> Enable
Eco/Green Driving Duration	
<input checked="" type="radio"/> Disable	<input type="radio"/> Enable
Output Control	
<input checked="" type="radio"/> None	<input type="radio"/> DOUT 1
<input type="radio"/> DOUT 2	
DOUT ON Duration (ms)	<input type="text" value="200"/>
DOUT OFF Duration(ms)	<input type="text" value="200"/>
Send SMS To	<input type="text" value=""/>
SMS Text	<input type="text" value="Green Driving"/>

When vehicle parameters exceed the values of *Max Acceleration*, *Max Braking* or *Max Cornering* parameters, the scenario is activated: a record is generated, and the digital output status is changed to 1 when configured. You can configure all three parameters in m/s<sup>2</sup> units. The scenario is activated

until the current Acceleration, Braking, or Cornering value decreases below the set parameter value. Parameters used with *Eco/Green Driving* functionality are given in a table below.

<b>Parameter name</b>	<b>Description</b>
Scenario Settings	Enable/Disable Green driving functionality
Max Acceleration	Value which can be reached while accelerating without triggering harsh acceleration event.
Max Braking Acceleration	Value which can be reached while braking without triggering harsh braking event.
Max Cornering Acceleration	Value which can be reached while cornering without triggering harsh cornering event.
Source	Which source (GPS or accelerometer) data will be collected from.
Eco/Green Driving Duration	If enabled, additional record with Eco/Green Driving event duration (ms) will be saved and send to server. When GPS is selected as the data source duration accuracy will be in seconds.

## Data output

---

Data from accelerometer/GPS are continuously monitored and processed and are used to decide whether a harsh event has occurred. If either of three cases is satisfied, an event is generated and a record is saved and sent to the server ([FMM80A](#) must be properly configured in order to send the record). Event value is multiplied by 100 before sending/saving records to get more precision when displaying data.

## Auto calibration

---

The auto-calibration process is following:

1. The vehicle is stopped.
2. There is a straight road ahead.
3. Send SMS "*auto\_calibrate:set*" to the FMB device.
4. Accelerate to >30 km/h for 5 sec.
5. FMB will send a response when calibration is completed successfully.

Calibration is saved to internal flash memory, which means it will stay after a reset. To check auto-calibration status send a following short text message to the FMB device: "*auto\_calibrate:get*".

## Over Speeding

When vehicle speed exceeds configured maximum speed value the scenario is activated, an event record is generated and digital output status is changed to 1 when configured.

Scenario is active until detected speed decreases below the set parameter value. Configurable parameters:



- Scenario settings - defines priority of over speeding scenario: 0 - disabled, 1 - low, 2 - high, 3 - panic.
- Max speed - it is max allowed speed which can be reached. If speed exceeded configured value, then event will occur.
- Send SMS to - GSM number to which SMS event will be sent.
- SMS text - SMS text.

## GNSS Fuel Counter

GNSS Fuel Counter	
City Consumption (L/100km)	0
Highway Consumption (L/100km)	0
Average Consumption (L/100km)	0
City Speed (km/h)	30
Highway Speed (km/h)	90
Average Speed (km/h)	60
Correction Coefficient	1
Fuel Consumption On Idling (L/h)	1
Higher Speeds Add (%)	20
Highway Consumption Every (km/h)	50


To configure *Fuel Counter* parameters use fuel consumption norms which are presented in the technical documentation of the vehicle. By default speeds for these fuel consumption norms are: City - 30 km/h, Average - 60 km/h, Highway - 90 km/h. These values can be changed.

When speed is higher than the highway fuel consumption speed, x% of highway fuel consumption is added every extra y km/h, by default [FMM80A](#) adds 20% every 50 km/h of extra speed. For example, the fuel consumption is (1.2 \* (Highway Fuel Consumption)) at 140 km/h and (1.4 \* (Highway Fuel Consumption)) at 190 km/h.

*Correction coefficient* is used to correct every value of fuel consumption which is sent to the server through an expression of  $((\text{Used Fuel}) * \text{Correction coefficient})$ . By default, it is 1, with minimum and maximum values of accordingly 0.01 and 2. For example, when the correction coefficient is 1 and [FMM80A](#) calculates that the amount of used fuel over 35 m distance is 20 ml, the value of 20 ml will be sent to the server, and if correction coefficient is 1.2, the value of  $20 * 1.2 = 24$  ml will be sent to the server.

*Fuel Consumption on Idling* is used to calculate fuel consumption when the ignition is on, but the vehicle is stationary. The consumption value is 1 l/h by default, with a minimum and maximum of accordingly 0 and 5 l/h. This parameter is less than 1.0 l/h for almost all diesel cars and is equal to about 1.5 - 2.0 l/h for gasoline cars.

## Ignition ON Counter

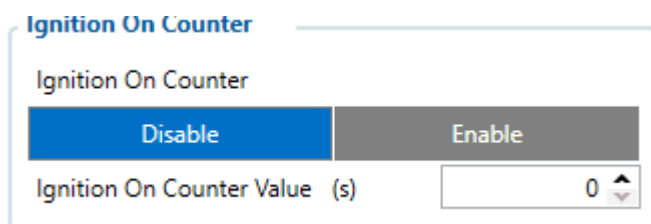

Ignition On Counter

Ignition On Counter

Disable Enable

Ignition On Counter Value (s) 0

**Ignition ON Counter** scenario counts the time spent with the ignition in the resolution of seconds. It is possible to configure a starting value of the counter. Maximum value: **2147483647** seconds or 596523.235 hours **NOTE THAT**, when entering a starting value, the value must be in seconds!

Example of Ignition On Counter **I/O** element:

Ignition On Counter	0
---------------------	---