

# FMM920 Security info

[Main Page](#) > [Basic Trackers](#) > [FMM920](#) > [FMM920 Configuration](#) > **FMM920 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the 'Security' section of the Teltonika FMM920 configurator. The top navigation bar includes the Teltonika logo and a series of utility buttons: 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. On the right side of the top bar, there is a SIM card icon and device information: 'IMEI 35663103001303', 'FW 03.25.15 Rev: 1.0', and 'Configuration 6.1.17.0'. The left sidebar contains a menu with options: Status, Security, System, GPRS, Data Acquisition, SMS \ Call Settings, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, Beacon List, I/O, and OBD II. The main content area is titled 'Device Info' and shows the following data:

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB <b>Format</b>	0 mV.
Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	35663103001303	00:00:47	Not Charging 0%

Below the 'Device Info' section, there are four tabs: 'GNSS Info', 'GSM Info', 'I/O Info', and 'Maintenance'. The 'GNSS Info' tab is active and displays three sub-sections:

- GNSS Status:** Module Status ON, GNSS Packets 32, Fix Status No fix, Fix Time 00:00:00.
- Satellites:** A table showing visible and in-use satellites for GPS, GLONASS, BeiDou, and Galileo. All counts are currently 0.
- Location:** Latitude/Longitude 0,0, Altitude 0, HDOP 0, Speed 0 km/h, Angle 0°, PDOP 0.

The bottom of the interface features a blue bar with social media icons (Facebook, YouTube, Twitter, Instagram, LinkedIn, WhatsApp) and a gear icon for settings.

\*Please note that This feature will only show up in configurator when device is connected to a computer.