

FMM SMS/GPRS Commands

Commands apply for these devices:

[FMB001](#) [FMB010](#) [FMB002](#) [FMB020](#) [FMB110](#) [FMB120](#) [FMB122](#) [FMB125](#) [FMB130](#) [FMB202](#) [FMB204](#) [FMB208](#) [FMB900](#) [FMB920](#) [FMB962](#) [FMB964](#) [FM3001](#) [FMT100](#) [FMC001](#) [FMM001](#) [FMC125](#) [FMC130](#) [FMM125](#) [FMM130](#) [FMU125](#) [FMU126](#) [FMU130](#) [MTB100](#) [FMB140](#)

All commands are case sensitive. When user tries to send SMS/GPRS message to device that operates in Deep Sleep mode, it cannot arrive to it because the GSM/GPRS module is disabled most of the time. Device will receive the SMS message when it exits Deep Sleep mode, but GPRS commands will not be received after exiting Deep Sleep Mode.

If the device is in GPS Sleep or Online Deep Sleep mode, sent SMS/GPRS message will arrive to the device.

SMS command structure:

<SMS login><space><SMS password><space><command><space><value>

SMS command [getinfo](#) example:

- If you have set SMS login and password: login pass getinfo
- If SMS login and password are not set leave two spaces before command: getinfo

GPRS commands require [Codec 12](#) protocol.

□

Contents

- [1 Commands apply for these devices:](#)
- [2 Common commands](#)
- [3 Bluetooth Commands](#)
- [4 Commands Related to Features](#)
- [5 OBD Commands](#)
- [6 CAN Adapter Commands](#)

To search for compatible products, [Expand all content](#)

Common commands

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

getinfo	Device runtime system information.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands
getver	Returns code version, device IMEI, modem app version, RTC time, Init time, Uptime and BT MAC address.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands
getstatus	Modem Status information.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands

getgps	Current GPS data, date and time.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands
getio	Readout analog input,digital input and output.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands
gaps	Returns location information with Google maps link.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands

radio #	Returns IO status, # AVL ID.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands
cpureset	resets device	No	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands
fwstats	Get data about FW and restarts	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands

getrecord	SMS command initiates saving and sending of high priority record	No	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands
getimeiccid #	Response is sent to SMS/GPRS command sender and also to GSM number provided. 1.# GSM number using international format e.g. 37069012345	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands
getimsi	Sends the IMSI number of the SIM card inserted as a response to the sender. If two SIM cards are inserted in the device, the response will be the IMSI number of the currently active SIM card. Note: This command is supported from 03.10.02 firmware version.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Common commands

allver	Responds with information about hardware and firmware versions and storage space	Yes	<p>FMBXXX [Expand]</p> <ul style="list-style-type: none"> FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250 	Common commands
getparam #	<p>Returns selected parameter value.</p> <ol style="list-style-type: none"> 1. # - first ID value. 2. # - second ID value. 3. # - third ID value. <p>SMS command is limited to 160 characters.</p>	Yes	<p>FMBXXX [Expand]</p> <ul style="list-style-type: none"> FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250 	Common commands
getparam #;#;#;...				
setparam #:#	<p>Sets selected parameter value</p> <p><i>[Parameter ID] : [New Parameter Value] ; [Parameter ID] : [New Parameter Value]...</i></p> <p>SMS command is limited to 160 characters.</p>	Yes	<p>FMBXXX [Expand]</p> <ul style="list-style-type: none"> FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250 	Common commands
setparam #:#;#:#;#;...				

<p>flush #,#,#,#,#,#,#</p>	<p>Redirects device to other server. 1.# - IMEI. 2.# - APN. 3.# - LOGIN. 4.# - PASS. 5.# - IP. 6.# - PORT. 7.# - MODE (0-TCP/1-UDP).</p>	<p>Yes</p>	<p>FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250</p>	<p>Common commands</p>
<p>countrecs</p>	<p>Returns records number.</p>	<p>Yes</p>	<p>FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250</p>	<p>Common commands</p>
<p>web_connect</p>	<p>Connect to Fota WEB immediately.</p>	<p>Yes</p>	<p>FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250</p>	<p>Common commands</p>

<p><i>deleterecords</i></p>	<p>Delete all records from SD card.</p>	<p>Yes</p>	<p>FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250</p>	<p>Common commands</p>
<p><i>setdigout</i> ## Y1 Y2 Z1 Z2</p>	<p>Set digital output. 1.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT1. 2.# - 0; 1 or ? (0 - OFF, 1 - ON, ? - Ignore) for DOUT2. Y1 - timeout value for DOUT1 if needed (in seconds). Y2 - timeout value for DOUT2 if needed (in seconds). Z1 - maximum speed value for DOUT1 if needed. Z2 - maximum speed value for DOUT2 if needed.</p>	<p>Yes</p>	<p>FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB900 FMB910 FMB920 FMB962 FMB964 FMB202 FMB204 FMB209 FMC125 FMM125 FMU125 FMC130 FMM130 FMU130 FMU126 MSP500</p>	<p>Common commands</p>
<p><i>battery</i></p>	<p>Returns battery state info.</p>	<p>Yes</p>	<p>FMBXXX [Expand] FMB001 FMC001 FMM001 FMB002 FMB003 FMB010 FMB020 FMB120 FMB122 FMB125 FMB130 FMB140 FMB910 FMB920 FMB962 FMB964 FMB202 FMB204 FMB208 FMB209 FMC125 FMM125 FMU125 FMU126 FMC130 FMM130 FMU130 MSP500 FMT100 FMP100 FMC800 FMM800 FMM80A TMT250</p>	<p>Common commands</p>

			FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	
wdlog	Returns all information about 'watch dogs'	Yes		Common commands
			FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	
defaultcfg	Load default configuration.	Yes		Common commands
			FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	
setkey # #	Add new or change current configuration keyword. If device is locked, keyword cannot be changed. 1.# - old keyword (if adding new keyword space). 2.# - new keyword.	Yes		Common commands

<p>delkey #</p>	<p>Remove existing keyword (If device is locked, keyword cannot be changed). 1.# - old keyword.</p>	<p>Yes</p>	<p>FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250</p>	<p>Common commands</p>
<p>bbread #</p>	<p>Return black box information (HEX value of event ID and HEX value of custom data field (optional)). 1.# - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.</p>	<p>Yes</p>	<p>FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250</p>	<p>Common commands</p>
<p>bbinfo #</p>	<p>Return same information as bbread command but additional all events timestamp is written in HEX. 1.# - returns entered number of latest events. When # is omitted the latest events are packed to single SMS.</p>	<p>Yes</p>	<p>FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250</p>	<p>Common commands</p>

FMBXXX [Expand]

- [FMB001](#)
- [FMC001](#)
- [FMB010](#)
- [FMB110](#)
- [FMB120](#)
- [FMB122](#)
- [FMB125](#)
- [FMB130](#)
- [FMB140](#)
- [FMB150](#)
- [FMC150](#)
- [FMM150](#)
- [FMB900](#)
- [FMB920](#)
- [FMB202](#)
- [FMB204](#)
- [FMB206](#)
- [FMT100](#)
- [FMP100](#)
- [FMC001](#)
- [FMC125](#)
- [FMC130](#)
- [FMM001](#)
- [FMM125](#)
- [FMM130](#)
- [FMC800](#)
- [FMM800](#)
- [FMM80A](#)
- [FMC880](#)
- [FMM880](#)
- [FMC250](#)
- [TMT250](#)

sdformat

Format SD card.

Yes

Common commands

Bluetooth Commands

Command	Description	Response	HW Support	Parameter Group
			FMBXXX [Expand]	
			FMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
			TMT250	
btgetlist #	Returns requested Bluetooth list. # - 0,1 or 2 (0 - Discovered, 1 - Paired, 2 - Connected).	Yes	FMBXXX [Expand]	Bluetooth commands
			FMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
			TMT250	
<i>btscan</i>	Starts Bluetooth scan.	Yes	FMBXXX [Expand]	Bluetooth commands
			FMB001	
			FMC001	
			FMB010	
			FMB110	
			FMB120	
			FMB122	
			FMB125	
			FMB130	
			FMB140	
			FMB150	
			FMC150	
			FMM150	
			FMB900	
			FMB920	
			FMB202	
			FMB204	
			FMB206	
			FMT100	
			FMP100	
			FMC001	
			FMC125	
			FMC130	
			FMM001	
			FMM125	
			FMM130	
			FMC800	
			FMM800	
			FMM80A	
			FMC880	
			FMM880	
			FMC250	
			TMT250	

<i>btvisible #</i>	Sets Bluetooth to visible with TMO. # - visibility TMO (from 1 to 255 seconds).	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Bluetooth commands
<i>btrelease #</i>	Disconnects from current device and pauses auto connect functionality for TMO. # - none or TMO (from 1 to 255 seconds).	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Bluetooth commands
<i>btunpair #</i>	Unpair Bluetooth device. # - all, BT address (all - unpair all devices, BT address - unpair only specified MAC address).	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250 TMT250	Bluetooth commands

Commands Related to Features

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

fc_reset	Resets fuel consumption parameters.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features
towingreact	Towing reactivation.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features
auto_calibrate:set	Returns the state of calibration.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features
adaset:#	Set total odometer value. # - new odometer value in km.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	Commands related to features

FMBXXX [Expand] [FMB001](#)
[FMC001](#)
[FMB010](#)
[FMB110](#)
[FMB120](#)
[FMB122](#)
[FMB125](#)
[FMB130](#)
[FMB140](#)
[FMB150](#)
[FMC150](#)
[FMM150](#)
[FMB900](#)
[FMB920](#)
[FMB202](#)
[FMB204](#)
[FMB206](#)
[FMT100](#)
[FMP100](#)
[FMC001](#)
[FMC125](#)
[FMC130](#)
[FMM001](#)
[FMM125](#)
[FMM130](#)
[FMC800](#)
[FMM800](#)
[FMM80A](#)
[FMC880](#)
[FMM880](#)
[FMC250](#)

[odoget](#)

Display current odometer value.

Yes

Commands related to features

FMBXXX [Expand] [FMB001](#)
[FMC001](#)
[FMB010](#)
[FMB110](#)
[FMB120](#)
[FMB122](#)
[FMB125](#)
[FMB130](#)
[FMB140](#)
[FMB150](#)
[FMC150](#)
[FMM150](#)
[FMB900](#)
[FMB920](#)
[FMB202](#)
[FMB204](#)
[FMB206](#)
[FMT100](#)
[FMP100](#)
[FMC001](#)
[FMC125](#)
[FMC130](#)
[FMM001](#)
[FMM125](#)
[FMM130](#)
[FMC800](#)
[FMM800](#)
[FMM80A](#)
[FMC880](#)
[FMM880](#)
[FMC250](#)
[TMT250](#)

[on_demand_trackingX](#)

X=0 - Stops Tracking on Demand functionality.
X=1 - Starts Tracking on Demand functionality.
X=2 - Generates one high priority record and initiates data sending to server.
Note: This command is supported from 03.25.06 firmware version.

Yes

Commands related to features

OBD Commands

Command	Description	Response	HW Support	Parameter Group
obdinfo	If connected with Bluetooth OBD dongle displays all available information from OBD.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands

faultcodes	If connected with Bluetooth OBD dongle display all visible fault codes.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands
cleardtc	Clears all vehicle stored fault codes.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands
getvin	Get vehicle VIN code, if OBD dongle is connected.	Yes	FMBXXX [Expand] FMB001 FMC001 FMB010 FMB110 FMB120 FMB122 FMB125 FMB130 FMB140 FMB150 FMC150 FMM150 FMB900 FMB920 FMB202 FMB204 FMB206 FMT100 FMP100 FMC001 FMC125 FMC130 FMM001 FMM125 FMM130 FMC800 FMM800 FMM80A FMC880 FMM880 FMC250	OBD Commands

CAN Adapter Commands

Command	Description	Response	HW Support	Parameter Group
---------	-------------	----------	------------	-----------------

lvcansetprog #	Set program number to CAN Adapter # three to five digit vehicle specific number	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcangetprog	Get program number from CAN Adapter	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcangetinfo	Get information about connected CAN adapter	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcansimpletacho #	Add or remove simpletacho start byte. # - 0 or 1 (0 - don't add start byte, 1 - add start byte).	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanclear #	Clear Total Mileage (counted), Engine Work Time (counted), Fuel Consumed (counted) parameters values. # - parameter (0 - Engine work time (counted), 1 - Fuel Consumed (counted), 2 - Vehicle Mileage (counted))..	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
allcanmode	Turn on ALL-CAN300 mode.	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanmode	Turn on LV-CAN200 mode.	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanfaultcodes	Read DTC fault codes.	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
lvcanopenalldoors	Toggle CAN-CONTROL to open [unlock] all doors	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands

<i>lvcanclosealldoors</i>	Toggle CAN-CONTROL to close [lock] all doors	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
<i>lvcanopentruunk</i>	Toggle CAN-CONTROL to open [unlock] trunk	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands
<i>lvcanturninglights</i>	Toggle CAN-CONTROL to flash lights One flash of all turn lights ordered trough accidental / blinking turn light switch	Yes	FMBXXX [Expand] FMB110 FMB120 FMB122 FMB125 FMU125 FMC125 FMM125 FMB130 FMU130 FMC130 FMM130	CAN Adapter Commands