

FMP100 Accelerometer Features settings

□

Contents

- [1 Accelerometer Calibration](#)
 - [1.1 Auto-calibration](#)
 - [1.2 Data Required](#)
 - [1.3 Re-Calibration](#)
- [2 Excessive Idling](#)
- [3 Unplug Detection](#)
- [4 Towing Detection](#)
- [5 Crash Detection](#)
- [6 Crash Data Visualisation](#)

Accelerometer Calibration

Calibration algorithm is used to recalculate accelerometer axes to represent vehicle's axes (see Picture below). Vehicles axes are as follows:

1. X is front.
2. Y is left.
3. Z is down.



Once vehicle's axes are calculated, device is considered calibrated.

Note: moving forward along any axis will generate negative values. This means acceleration will generate -X values, accordingly breaking will generate X values. Same goes for other axes.

Configurable parameters can be found at [System Settings Accelerometer Auto Calibration](#)

Commands that can be used during calibration:

| Command | Response | Description |
|-----------------------|----------|--|
| auto_calibrate:set | Yes | Request auto calibration task start |
| auto_calibrate:get | Yes | Request calibration info (time, ground vector, side vector) |
| auto_calibrate:clear | Yes | Request calibration clear from flash and stop calibration task |
| auto_calibrate:status | Yes | Request calibration status and calibration task status |

Auto-calibration

Auto calibration task is launched on one of these conditions (assume calibration is enabled in configuration):

1. Every time device turns on, it checks whether it was previously calibrated and has calibration stored in flash. If device has no calibration in flash, auto calibration task is started.

2. Device calibration was previously disabled by configuration and now is enabled.
3. SMS "auto_calibrate:set" is received. Note: SMS response is sent after calibration has been acquired.

This SMS triggers an SMS response to be sent. Response is sent when calibration is acquired. When 1 hour passes without successful calibration, failed SMS response is sent.

4. Calibrated device's mean axes of set interval differ more than set amount from desired (0,0,1) calibration is considered inaccurate. Calibration is deleted from flash and auto calibration task started.

After auto calibration task has been started, it will go on indefinitely until satisfactory calibration is acquired.

Data Required

Auto calibration needs to fill two buffers to calibrate the device:

1. All accelerometer data - buffer which collects all data from accelerometer at 10Hz frequency. To fill this buffer set seconds of data samples are needed. When buffer is full, oldest data is dumped and new data is placed into the buffer.
2. Straight accelerometer data - buffer which collects straight accelerations data from accelerometer at 10Hz frequency. To fill this buffer set seconds of data samples (set times Hz samples) are needed. When buffer is full, oldest data is dumped and new data is placed into the buffer. Algorithm rules to acquire these samples:
 - 2.1. GPS fix is present.
 - 2.2. Ignition is on.
 - 2.3. GPS speed is more than 5 km/h.
 - 2.4. GPS heading is equal to last GPS heading (+/-1 degree) at GPS sample rate 1Hz.
 - 2.5. GPS speed more then 5 km/h from last sample (accelerating).

Once both buffers are full, auto calibration is attempted. If calibrated values pass calibration quality threshold, calculated calibration is written to flash as current calibration - device is calibrated.

Note: If GPS fix is lost or ignition is turned off, buffers' data is dumped and must be gathered from 0 again.

At this point calibration is successfully ended as indication device sends an SMS/GPRS message with *Device is calibrated, to recalibrate send:auto_calibrate:set*.

Note: SMS/GPRS message will be sent only if auto calibration functionality was triggered by SMS/GPRS message. For user convenience in case auto calibration functionality fails then notification message will be sent. For exact messages, check algorithm section.

Note: SMS/GPRS message will be sent only if auto calibration functionality was triggered by SMS/GPRS message. To get current calibration status auto_calibrate:get SMS/GPRS command must be sent to the device. If device is calibrated it will respond with Calibration state: calibrated or otherwise Calibration state: not calibrated. Also this command returns saved Ground and Side vectors.

Re-Calibration

When calibration is present, device checks for re-calibration every 60s indefinitely. Re-calibration requires fix and ignition to run also re-calibration is turned off when vehicle is stopped for more than 15s until conditions are satisfied again. When calibrated device's mean axes of set interval(calibrated accelerometer data) differ more than set amount from desired (0,0,1) (perfect vehicle's axes) calibration is considered inaccurate, or device's position has changed and re-

calibration is needed. Calibration is cleared from flash and auto calibration task is started.
 Note: turning device around calibrated Z axis will not trigger re-calibration, after turning device around Z axis manual re-calibration is advised. After calibration if quality value is less than 0.80, calibration update functionality is run. Calibration update constantly tries calibrating device in background until 0.80 quality is reached. Calibration update functionality does not change calibration if calculated new calibration quality is less than 0.80.

Excessive Idling

Excessive Idling

Scenario Settings

| | |
|---------------|----------------|
| Disable | Low Priority |
| High Priority | Panic Priority |

Eventual Records

| | |
|---------|--------|
| Disable | Enable |
|---------|--------|

Time To Stopped (s)

Time To Moving (s)

Output Control

| | |
|--------|--------|
| None | DOUT 1 |
| DOUT 2 | DOUT 3 |

DOUT ON Duration (ms)

DOUT OFF Duration (ms)

Send SMS To

SMS Text

When vehicle stops for a specific amount of time the scenario is activated, a record will be generated and digital output status will be changed to 1 when configured. You can configure the time it takes to turn on this scenario (*Time to Stopped*). Scenario is activated until the vehicle starts moving (movement is detected only by the accelerometer) and keeps moving for an amount of time that is configured. You can configure the time it takes to turn off this scenario (*Time to Moving*)

When there is no GPS fix, the system uses accelerometer data to determine movement:

- * If the ignition is on and the accelerometer detects movement without a GPS fix, the vehicle is not considered idling.
- * If the ignition is on but the accelerometer indicates no movement without a GPS fix, the vehicle is considered idling.
- * If the ignition turns off during detected excessive idling, an AVL ID: 251 and Value: 0 will be generated.

Unplug Detection

| Unplug Detection | |
|-----------------------|----------------|
| Scenario Settings | |
| Disable | Low Priority |
| High Priority | Panic Priority |
| Eventual Records | |
| Disable | Enable |
| Unplug Detection Mode | |
| Simple | Advanced |
| Make Call To | ▼ |
| Send SMS To | ▼ |
| SMS Text | Unplug |

In 03.25.15.Rev.122 version:

If unplug detection scenario is enabled, conditions to determine unplug state are checked every second. Initially external power is checked to set device to appropriate unplug state. If external power is less than 5.25 volts, unplugged state is set, on the other hand, if external power is higher than or equal 5.25 volts, plugged state is set. There are two configurable (id: 11502) unplug detection modes: simple and advanced.

If simple mode is configured:

- Unplug scenario changes states from plugged to unplugged, when external power is less than 5.25 volts AND unplug detection pin is high (meaning that device is pulled out of holder).
- Unplug scenario changes states from unplugged to plugged, when external power is higher than or equal 5.25 volts OR unplug detection pin is low (meaning that device is pushed into the holder) OR these both conditions are true.

If advanced mode is configured:

- Unplug scenario changes states from plugged to unplugged, when unplugged detected by accelerometer flag is set to true AND unplug detection pin is high (meaning that device is pulled out of holder). This unplugged detected by accelerometer flag is set to true when external power is less than 5.25 volts and measured accelerometer threshold exceeds 0.31 mg. Once accelerometer threshold exceeds 0.31 mg it is not going to be measured again until external power will be higher or equal to 5.25 volts.
- Unplug scenario changes states from unplugged to plugged, when external power is higher than or equal 5.25 volts OR unplug detection pin is low (meaning that device is pushed into the holder) OR these both conditions are true.

In 03.27.02.Rev.160 version after base update to 03.27.02.Rev.01 additional condition was introduced when calculating accelerometer measured values in configured advanced mode. This workaround came from version 03.25.15.Rev.03, if no movement detected, z axis is ignored.

Towing Detection



Towing Detection feature helps to inform the driver about unexpected car movement when it was parked. FMB1YX generates an event when car is being towed or lifted, for example, in a case of vehicle evacuation. FMB1YX activates towing function when following conditions are met:

1. Ignition (configured Ignition Source) is OFF.
2. *Activation Timeout* is reached.

When towing function is engaged FMB1YX monitors accelerometer data. If acceleration *Threshold* or *Angle* reach configured values for a configured *Duration*, and Ignition is still OFF for a period of time that is longer than *Event Timeout*, then an event is generated. When configured, *Make Call To* and *Send SMS To* functions make a call or send an SMS to a predefined phone number. Towing function will be reactivated after FMB1YX detects a change of Ignition state from ON to OFF.

Crash Detection



[Click here to enter Crash Tracer data parsing page](#)

If *Crash Detection* is enabled, it monitors acceleration on each axis which helps to detect an accident. *Threshold* and *Duration* values are set depending on the impact magnitude that is required to be detected. FMT100 can detect events ranging between a slight tapping on the device and a severe accident.

If *Crash Trace* is disabled only one eventual crash record will be generated when *Duration (ms)* and *Threshold (mg)* values are exceeded.

If *Crash Trace* is enabled, FMT100 will collect crash trace data with frequency defined by *Trace ODR (Hz)* parameter. Acceleration, GNSS and IO data monitoring duration during the crash event is defined by these parameters:

- *Accel duration (s)*. Acceleration data duration can be set for up to 15 seconds before crash event and 15 seconds after;
- *GNSS duration (s)*. GNSS data duration can be set for up to 30 seconds before crash event and 30 seconds after.
- *IO duration (s)*. IO data duration can be set for up to 30 seconds before crash event and 30 seconds after.

There are three configurable Crash Trace modes:

Trace Full

- Data tracked: all GNSS and acceleration data

Trace Full with IO's

- Data tracked: all GNSS and acceleration data with IO's, configured in I/O settings as "Crash" parameter (see picture below)



Trace Changes

- Data tracked: GNSS and acceleration data, when acceleration values are changed by more than 50mG

NOTE: with Crash Trace mode enabled, it is recommended to use *Codec 8 Extended* Data Protocol. This helps to optimize crash trace data sending from device to server.



Each record will have accurate timestamps in milliseconds.



Crash Data Visualisation

With Teltonika *CrashDataVisualizer* tool you can analyze crash trace data visually: determine impact to vehicle direction, view crash trace on the map, also see the change of mG and speed values during crash time period. *CrashDataVisualizer* is dedicated to work with TAVL application, it means that only crash trace log files exported from TAVL is compatible. To have ability to export crash trace log files, device must be configured to send data by Codec8E.

To start using *CrashDataVisualizer*

Download and install TAVL (version 4.15.0.1 or later) + *CrashDataVisualizer* applications from here:

Link: <https://drive.teltonika.lt/d/05369fc90d9744afb14f/>

Password: TJEk24YApbRhWrQQ

To get crash data

Login to TAVL application (please contact your Sales manager for TAVL login information).



In TAVL application:

1. Go to Events
2. Set the date of event
3. Select the object you want to analyze
4. Press "Crashes" button

Crash event list window will show up. Press Download icon and save crash event file (.JSON).



Viewing crash data in application

Open CrashDataVisualizer application. Drag and Drop or Browse crash data file (.JSON).



Use the Visualizer.

