

FMP100 Security info

[Main Page](#) > [Fast & Easy Trackers](#) > [FMP100](#) > [FMP100 Manual](#) > [FMP100 Configuration](#) > **FMP100 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card (SIM1 or SIM2) can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- If two SIM cards are inserted into the device, user can change PIN codes for both of them.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMP100 configurator's Security section. At the top, there is a navigation bar with utility buttons: 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. A right-side panel shows device identification: 'IMEI 35963309001000', 'FW 03.25.15 Rev: 1.0', and 'Configuration 6.1.17.0'. The left sidebar contains a menu with options like 'Status', 'Security', 'System', 'GPRS', 'Data Acquisition', 'SMS \ Call Settings', 'GSM Operators', 'Features', 'Accelerometer Features', 'Auto Geofence', 'Manual Geofence', 'Trip \ Odometer', 'Bluetooth', 'Bluetooth 4.0', 'Beacon List', 'I/O', and 'OBD II'. The main content area is divided into sections: 'Device Info' (Device Name, Last Start Time, Power Voltage, Ext Storage, Battery Voltage, Firmware Version, RTC Time, Device IMEI, Device Uptime, Internal Battery Status), 'GNSS Info' (GNSS Status, Satellites, Location), 'GSM Info', 'I/O Info', and 'Maintenance'. The 'GNSS Info' section is active, showing 'GNSS Status' (Module Status ON, GNSS Packets 32, Fix Status No fix, Fix Time 00:00:00) and 'Satellites' (Visible: GPS 4, GLONASS 0, BeiDou 0, Galileo 0; In Use: GPS 0, GLONASS 0, BeiDou 0, Galileo 0; Total In View 4, Total In Use 0). A 'Location' section shows Latitude/Longitude 0,0, Altitude 0, HDOP 0, Speed 0 km/h, Angle 0°, and PDOP 0. The bottom of the interface features social media icons and a settings gear icon.

*Please note that This feature will only show up in configurator when device is connected to a computer.