

FMT100 Security info

[Main Page](#) > [Fast & Easy Trackers](#) > [FMT100](#) > [FMT100 Configuration](#) > **FMT100 Security info**

In security section user can see SIM card and configurator keyword security information.

- The state and status of currently connected SIM card can be observed here. If a SIM card with PIN code is used, user can enter it in this section. The remaining attempts to enter PIN code are shown as well.
- When SIM PIN code is entered correctly user can change PIN code or disable it from the SIM card. When SIM PIN is disabled and user would like to enable it again, user must enter the previously used PIN code.
- Configuration security keyword can be set to configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure the keyword. Minimum keyword length is 4 symbols and maximum length is 10 symbols. Only uppercase and lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when the device is not connected.

The screenshot displays the Teltonika FMT100 configurator interface. The top navigation bar includes buttons for 'Load from device', 'Save to device', 'Update firmware', 'Reset configuration', 'Load from file', 'Save to file', 'Read records', and 'Reboot device'. The right side of the top bar shows the IMEI, FW 03.25.15 Rev: 1.0, and Configuration 6.1.17.0. The left sidebar contains a menu with options: Status, Security, System, GPRS, Data Acquisition, SMS \ Call Settings, GSM Operators, Features, Accelerometer Features, Auto Geofence, Manual Geofence, Trip \ Odometer, Bluetooth, Bluetooth 4.0, Beacon List, I/O, and OBD II. The main content area is titled 'Device Info' and displays the following data:

Device Name	Last Start Time	Power Voltage	Ext Storage (used/total)	Battery Voltage
	31/12/2003 06:00:18 p. m.	17105 mV.	0 / 122 MB Format	0 mV.
Firmware Version	RTC Time	Device IMEI	Device Uptime	Internal Battery Status
03.25.15 Rev: 1.0	31/12/2003 06:01:05 p. m.	35663300301303	00:00:47	Not Charging 0%

Below the Device Info section, there are tabs for 'GNSS Info', 'GSM Info', 'I/O Info', and 'Maintenance'. The 'GNSS Info' section is active and displays the following data:

GNSS Status		Satellites		Location	
Module Status	GNSS Packets	Visible:		Latitude/Longitude	Altitude
ON	32	GPS	GLONASS	0,0	0
Fix Status	Fix Time	4	0	Speed	HDOP
No fix	00:00:00	BeiDou	Galileo	0 km/h	0
		0	0	Angle	PDOP
				0°	0
		Total In View	Total In Use		
		4	0		

*Please note that This feature will only show up in configurator when device is connected to a computer.