

FMX6 getinfo

Example:

```
"INI:2022/10/25 11:25 RTC:2022/10/26 17:53 RST:1 ERR:1 SR:152 BR:0 CF:0 FG:0 FL:0 TU:21/0  
UT:0 SMS:6 NOGPS:0:4 GPS:3 SAT:15 RS:3 RF:0 SF:1678 MD:5"
```

Response details	Description
INI	Init time.
RTC	RTC time.
RST	Device restarts for any reason.
ERR	Modem restarts since startup.
SR	Records sent since startup.
BR	Bad records counter since startup.
CF	Obsolete always 0.
FG	Failed GPRS connect, counter since startup.
FL	Failed connection to AVL data server, counter since startup.
TU	Time until data send counter "main/backup - servers".
UT	UDP server response timeout, counter since startup.
SMS	Sent SMSs since startup.
NOGPS	No GNSS fix time, counter since startup.
GPS	GNSS module status. 0 - OFF 1 - GNSS ON, no GPS antenna 2 - ON without fix 3 - ON with fix 4 - Sleep mode 5 - Overcurrent
SAT	GNSS satellites in use.
RS	Device reset cause.
RF	Not send records found in device memory.
SF	Failed to access SD card counter.
MD	Current active mode.