

# FTC881 LED behaviour description

[Main Page](#) > [Fast & Easy Trackers](#) > [FTC881](#) > [FTC881 Manual](#) > **FTC881 LED behaviour description**

This section is an explanation of LED indications on an FTC881 device.

## Navigation LED Indications

Behaviour	Meaning
<b>Permanently switched on</b>	GNSS signal is not received
<b>Blinking every second</b>	Normal mode, GNSS is working
<b>Off</b>	GNSS is turned off because: Device is not working or Device is in sleep mode
<b>Blinking fast constantly</b>	Device firmware is being flashed

## Status LED Indications

Behaviour	Meaning
<b>Blinking every second</b>	Normal mode
<b>Blinking every two seconds</b>	Sleep mode
<b>Blinking fast for a short time</b>	Modem activity
<b>Off</b>	Device is not working or Device is in boot mode