

FTC961 SMS/call settings

[Main Page](#) > [Basic Trackers](#) > [FTC921](#) > [FTC961 Configuration](#) > **FTC961 SMS/call settings**

SMS Security

Allow to set password, that will be use in SMS

Password — Configure the password that will be required for each SMS

On FTC platform **only a password** will be required **when sending SMS**. If no password is set, messages will be sent with one space in front.

Example of sending getio command (no password):

```
" getio"
```

Example of sending getio command (password:123):

```
"123 getio"
```