

Frequently Asked Questions - FAQ

[Main Page](#) > **Frequently Asked Questions - FAQ**



Contents

- [1 FM devices](#)
- [2 CAN bus adapters](#)
- [3 EYE Accessories](#)
- [4 Bluetooth® solutions](#)
- [5 OBD solutions](#)
- [6 Serial interface solutions](#)
- [7 Selling solutions as your own](#)
- [8 IoT portal](#)
- [9 Encryption](#)

FM devices

- [Starting with Teltonika Telematics](#)
- [Recommendations for filling a query description](#)
- [How to start with FMB devices and Beacons?](#)
- [Teltonika Vehicle Telematics device mounting instructions](#)
- [RMA guidelines](#)
- [How to correctly fill the Helpdesk ticket?](#)
- [How to capture remote log from FM device?](#)
- [How to capture remote Tacho log from FM device?](#)
- [Why my device is not sending data to server?](#)
- [Where can I find PDF versions of FM manuals?](#)
- [Requirements for eSIM](#)
- [Sending SMS to FMB devices with 1nce platform](#)
- [Auto APN feature for FM trackers](#)
- [How to set up Eco Driving in Wialon app](#)
- [Frequency Bands](#)
- [Firmware versions](#)

CAN bus adapters

- [Troubleshooting LV-CAN200, ALL-CAN300, CAN-CONTROL](#)
- [Connection scheme shows the use of a resistor. What power resistor should I choose?](#)
- [Connection scheme shows two CAN wires of the same color connected to one connector](#)
- [How to capture CAN adapter log from FMX1YX?](#)
- [How to capture CAN adapter log from FM device?](#)
- [How to update CAN adapter Over The Air](#)
- [Immobilizing and locking issues using CAN-Control with Immobilizer](#)

- [CAN adapter supported vehicles](#)
- [What to do if the FM device shows old program number instead of new configured one?](#)

EYE Accessories

- [Table of contents](#)
- [Questions about Power and Electrical characteristics](#)
- [Questions about EYE Accessory configuration \(EYE APP\)](#)
- [Questions about FMBxxx compatibility with EYE Accessories](#)
- [Questions about Protocols](#)
- [Other questions \(Questions without category\)](#)

Bluetooth® solutions

- [How to connect OBD II Bluetooth® Dongle to FMB device?](#)
- [How to connect Bluetooth® Hands Free adapter to FMB device?](#)
- [How to add a BLE preset to the configurator?](#)
- [How to debug FMB device over Android smartphone?](#)
- [Making Custom BLE Sensor configuration and preset](#)
- [How to capture ELA Beacon internal battery voltage?](#)
- [How to read data from TZ-BT04/05/05B sensor](#)
- [How to read data from BLE Sensors](#)
- [How to read data from BLE Beacons](#)
- [Advanced Beacon Capturing Configuration](#)
- [BLE broadcast service ID configuration](#)

OBD solutions

- [How to check available OBDII data?](#)
- [How to capture OBDII data log?](#)
- [OBD supported vehicle list](#)
- [How to enable OEM Parameters?](#)
- [OBD II TO FMS ADAPTER AND J1939 SUPPORT IN FMx003](#)
- [How to read OBDII EV Parameters?](#)

Serial interface solutions

- [Modbus slave integration with FMX125/FMX640](#)

Selling solutions as your own

- [Changing brand on OEM devices](#)

IoT portal

- [Sending free and unlimited SMS with IoT Platform \(Truphone\)](#)
- [How to check Outbound SMS usage with IoT Platform \(Truphone\)](#)
- [Creating Auto Top Up / Low Data notification rule \(Truphone\)](#)
- [How to check Top-up usage with IoT Platform \(Truphone\)](#)

- [How to manually Top-up SIM Cards \(Truphone\)](#)

Encryption

- [TLS/DTLS implementation for Flespi using OpenSSL](#)