# **Getting Started With TachoSync**

<u>TachoSync</u> > Getting Started With TachoSync

#### □ Contents

- 1 Fleet management Device requirements
- 2 Device configuration
- 3 Network requirements
- 4 How to access TachoSync

Here you will find all needed information related to requirements of the devices and their configuration. Additionally, you will familiarize with network requirements and will find a login link, so you could easily start using TachoSync platform.

## Fleet management Device requirements

**Supported models** FMB640, FMC640, FMM640, FMB641, FMC650, FMM650. **Minimal Firmware version** 01.02.11 or later, works with every firmware

#### **Device configuration**

In order for a device to connect to TachoSync the domain and port must be configured in configurator:



### **Network requirements**

If your SIM cards are within Mobile Operator's VPN (private APN), the following must be ensured and paid special attention.

- **1.** Must ensure that domain <a href="https://tacho.teltonika.lt/">https://tacho.teltonika.lt/</a> can be resolved from within Operator's network.
- 2. Following domain and port must be allowed by the operator:

• Domain: tacho.teltonika.lt

• Port: 29000

When using VPN SIM cards, you should still configure <a href="https://tacho.teltonika.lt/">https://tacho.teltonika.lt/</a> domain in your configurator, not the plain IP address.

### How to access TachoSync

Link to login: <a href="https://tacho.teltonika.lt/dashboard">https://tacho.teltonika.lt/dashboard</a>