

Getting started with TCT

[Main Page](#) > [Software & Applications](#) > [Telematics Configuration Tool \(TCT\)](#) > **Getting started with TCT**



Contents

- [1 Minimum System Requirements](#)
- [2 Important information](#)
- [3 Launching TCT desktop version](#)
 - [3.1 TCT Download Link](#)
 - [3.2 Installation guide](#)
 - [3.3 Teltonika COM Driver Installation](#)
 - [3.4 Creating an Offline Configuration File](#)
 - [3.5 Creating an Online Configuration File](#)
 - [3.6 Editing a Configuration File](#)
 - [3.7 Differences between Offline and Online Configuration](#)
- [4 Launching TCT web version](#)
 - [4.1 Start up guide](#)
 - [4.2 Creating an Offline Configuration File](#)
 - [4.3 Editing a Configuration File](#)
 - [4.4 User keys](#)

This page will provide you with all the necessary information needed to successfully launch the TCT application on your PC for the first time. Moreover, we will cover the different types of configuration files (offline vs online) you can create with the help of TCT.

Minimum System Requirements

OS	Windows 10; Windows 11
CPU	Intel or AMD processor with 64-bit support
Disk Storage	1 GB of free disk space
Memory	500 MB of free RAM
Graphics	DirectX 9 or later with WDDM 1.0 driver
Internet	Ethernet port or Wi-Fi w/ network access for auto-update

Important information

Before continuing please read information below:

- TCT supports FTx platform devices - FTC921, FTC961, and FTC881 (starting 1.1.80 release).
- From TCT 2.0.0 onwards, only FT platform devices are supported.

Launching TCT desktop version

TCT Download Link

Below you can find the installation file for the latest version of TCT :

Version Upload date Link

Comment

2.0.30 2024-11-19



If you are using 1.1.80 or a lower TCT version, 2.0.30 must be installed manually.

Installation guide

Follow the steps below in order to install TCT on your PC:

1. Install TelematicsConfigurationTool.Setup.exe with admin privileges.
 2. Accept the license agreement.
 3. Choose whether TCT should be available to all users or just to you (current user).
 4. Select the location where you want to install TCT. By default, TCT is installed in the program files. However, you can install it anywhere you want.
 5. Wait until the installation is complete and click **Finish** to exit installation wizard.
-

Information below is relevant for TCT version 1.1.80 or older.

IMPORTANT NOTES

Windows smart screen may appear during first installation. If this occurs please follow the steps below:



1. Click on **More info** to access additional details about the application;
 2. Make sure that the application name is **TelematicsConfigurationTool.Setup.x.x.x.exe**. Take into account that "x" represents the version of TCT and can differ depending on the installation file you have;
 3. Make sure that the publisher is **TELTONIKA TELEMATICS**;
 4. If everything is correct, please click on **Run anyway**;
 5. After confirmation the installation setup will start immediately.
-

Teltonika COM Driver Installation

Teltonika COM Driver is a serial communication port driver for Teltonika Telematics device, It is one of the requirements for TCT to work properly, without this driver TCT will not detect your Teltonika Telematics device.

Download COM port drivers from Teltonika [here](#).

Follow the steps below in order to install **Teltonika COM Driver** :

1. Run **Teltonika COM_Driver** with admin privileges' to begin the installation.
2. Click the checkbox for **TELTONIKA COM Driver**
3. Click next and modify/configure the destination folder for installation.
4. Click **Install** and wait for the progress bar to be completed.
5. And finally click **Close** to exit the installation.

Creating an Offline Configuration File

In order to create an offline configuration file, follow the steps below:

1. Select a device from the list. You can use Search and Filter to find it.
2. Click **Configure** button.
3. Make configuration and save it by click on **Save to file** button.



Creating an Online Configuration File

In order to create an online configuration file, follow the steps below:

1. Make sure that your device is supported by TCT by checking [Supported Devices list](#).
2. Connect your device to PC.
3. In TCT device will appear on **Discovered devices** list click there **Configure** button.
4. Configure device and save the changes made to device by click on **Save to device** button.



Editing a Configuration File

In order to open an existing configuration file, follow the steps below:

1. In offline configuration section click on **Open** button.
2. Select the configuration file and click **Open**
3. Wait for the configuration file to load, edit it and save the changes made by click on **Save to file** button.



IMPORTANT NOTES

- On the left side of the TCT window, you will find the configuration name under **Configuration once file is loaded**.



Differences between Offline and Online Configuration

Offline configuration refers to creating a configuration without any device connected. Later you can load this configuration file created in offline mode into the device remotely (via **FOTA WEB**) or when a device is connected to your PC. On the other hand, Online Configuration refers to creating a configuration with a device connected and you can directly save the changes into the device.

Launching TCT web version

Start up guide

Follow the steps below in order to start using TCT:

1. Open FOTA WEB in your browser. FOTA WEB link: <https://fota.teltonika.lt/>
2. Log in to the FOTA web using your login details.
3. Click on TCT web tab

4. Choose to **Create** a new configuration or **Edit** an existing file from FOTA WEB.

5. Once **Create** button is pressed or file selected and **Edit > Continue** buttons is pressed, it will open a new browser tab with TCT.



Creating an Offline Configuration File


In order to create an offline configuration file, follow the steps below:

1. Select a device from the list.
2. Click **Configure** button.





Editing a Configuration File

In order to open an existing configuration file, follow the steps below:

1. In offline configuration section click on **TCT web** button.
2. Select **Edit** button.

3. Select the configuration file and click **Continue** button.



4. Wait for the configuration file to load, edit it and save the changes you've made by clicking on **Save to FOTA WEB** button.

5. You can choose from **Full save** and **Only changes** options.

6. The needed to edit configuration can also be selected from the **Files** tab and changed by selecting **Edit in TCT web**.



IMPORTANT NOTES

- On the left side of the TCT window, you will find the configuration name under **Configuration once file is loaded**.

User keys

User key functionality grants access to exclusive features, including additional functionalities and specialized firmware support.

To enter or view user keys, go to Settings and select User keys (available from 2.0.10).



In the new modal enter the provided user key and its name that will appear in the table.



IMPORTANT NOTES

- The added user key may have an expiration date.