

How to read data from TZ-BT04/05/05B sensor with GH5200 device

[Main Page](#) > [Autonomous Trackers](#) > [GH5200](#) > [GH5200 FAQ](#) > **How to read data from TZ-BT04/05/05B sensor with GH5200 device**



Contents

- [1 How to read data from TZ-BT04/05/05B sensor with GH5200 device](#)
 - [1.1 Solution applies for these SAS devices](#)
 - [1.2 Configuration](#)

How to read data from TZ-BT04/05/05B sensor with GH5200 device

Solution applies for these SAS devices



| [TMT250](#) | [GH5200](#) |

Configuration

These are instructions on how to easily read data from **TZ-BT04/05/05B** Bluetooth LE sensor with **GH5200** device.

First the GH5200 device Bluetooth settings need to be configured. These are the required steps:

- Press Bluetooth settings.
 - Turn on **BT Radio** by pressing **Enable (hidden)** or **Enable (visible)**.
- Press Bluetooth 4.0 settings.
 - Select TZ-BT04/05/05B sensor in **BLE connectionless functionalities** section.
 - Type your TZ-BT04/05/05B ID in ID field.
 - After all these steps press **Save** to device to save configuration.
 - To start BLE scan right away press **Discover BLE**.

More information about these settings can be found on [GH5200 Bluetooth 4.0 Configuration modes](#) page.



To check if the GH5200 device has already received data from **TZ-BT04/05/05B** Bluetooth LE sensor, follow these steps:

- Navigate to **Status** section.
- Press **I/O Info** and look if **BLE Temp**, **BLE Battery** and **BLE Humidity** has any values.