

# Inateck BCST-70 First Start

[Main Page](#) > [Accessories](#) > [Inateck BCST-70 Barcode Scanner](#) > **Inateck BCST-70 First Start**

□

## Contents

- [1 Inateck Barcode Scanner Configuration](#)
  - [1.1 Configure Scanner to use Enter as Suffix](#)
  - [1.2 Configure Scanner to SPP Mode](#)

## Inateck Barcode Scanner Configuration

### Configure Scanner to use Enter as Suffix

Power on Inateck BCST-70 by toggling switch from OFF to ON.

**IMPORTANT NOTE** : *Inateck Scanner could not scan Barcodes through screen/monitor, barcodes should be printed as hard copy to proceed on the configuration.*

1. Scan the "Enter Setup" barcode



2. Scan the "Apply Enter as Stop Character" barcode



3. Scan the "Exit with Save" barcode



### Configure Scanner to SPP Mode

BCST-70 has Bluetooth® capability that supports data transmission under HID and SPP two modes. When under HID mode, the BCST-70 connects your phone or computer automatically after pairing successfully. When under SPP mode, the BCST-70 can only finish connecting your phone or laptop with help of serial debugging tools after pairing successfully. For connection with Teltonika FM devices, scanner must use SPP Mode.

**IMPORTANT NOTE** : *If scanner does not use SPP mode, Teltonika FM device would not detect the*

*scanner under the Bluetooth® tab*

1. Scan the "Enter Setup" barcode



2. Scan the "Apply Enter as Stop Character" barcode



3. Scan the "Exit with Save" barcode

