

# MTB100 LED status

[Main Page](#) > [EOL Products](#) > [MTB100](#) > [MTB100 Manual](#) > **MTB100 LED status**

This section is an explanation of LED indications on an MTB100 device.

## Status LED Indications

Status LED	State	Mode
<b>0.5s ON / 0.5s OFF</b>	Sending to server (main or backup)	Normal mode
<b>1s ON / 2s OFF</b>	GNSS fix	Normal mode
<b>Always ON</b>	No GNSS fix	Normal mode
<b>OFF</b>	Device is not working or Ultra deep sleep	Device is not working or Ultra deep sleep mode
<b>0.025s ON / 1.975s OFF</b>	Device is not working or Any sleep	Device is not working or Other sleep modes