

MTB100 LED status

[Main Page](#) > [EOL Products](#) > [MTB100](#) > [MTB100 Manual](#) > **MTB100 LED status**

This section is an explanation of LED indications on an MTB100 device.

Status LED Indications

Status LED	State	Mode
0.5s ON / 0.5s OFF	Sending to server (main or backup)	Normal mode
1s ON / 2s OFF	GNSS fix	Normal mode
Always ON	No GNSS fix	Normal mode
OFF	Device is not working or Ultra deep sleep	Device is not working or Ultra deep sleep mode
0.025s ON / 1.975s OFF	Device is not working or Any sleep	Device is not working or Other sleep modes