

# Mechatronics Eurosens DDS BT

[Main Page](#) > [Accessories](#) > **Mechatronics Eurosens DDS BT**



## Contents

- [1 Introduction to the product](#)
- [2 Specification of Eurosens DDS BT](#)
- [3 Installation Recommendation for Eurosens DDS BT sensor](#)
- [4 How to configure Eurosens DDS BT with Mobile Application](#)
  - [4.1 Connection of the axle load sensor to the terminal](#)
    - [4.1.1 GNOM DDE S7](#)
    - [4.1.2 GNOM DP S7](#)
- [5 Data on the telematics server](#)
  - [5.1 Temperature sensor configuration](#)
  - [5.2 Configuration of the axle load sensor in the pneumatic system](#)
  - [5.3 DTCs mask sensor configuration](#)

## Introduction to the product

The Axle load sensor Eurosens DDS BT is used to determine the displacement of a leaf spring suspension of a vehicle. The operation of sensor is based on the conversion of the sensor lever rotation angle into digital data. A magneto resistive sensing element is used as a transducer.




## Specification of Eurosens DDS BT

Parameter, measurement unit	Value
Power supply, V	3.6
Measured angle range, deg	-40...40
Relative error of rotation angle detection, %	2 and less
Ambient operating temperature, °C	-40...+85
Output interface	Bluetooth 4.2

## Installation Recommendation for Eurosens DDS BT sensor

The sensor should be installed so that its lever rotation angle reaches its maximum during vehicle loading process. Consider road bumps impact on the suspension state.

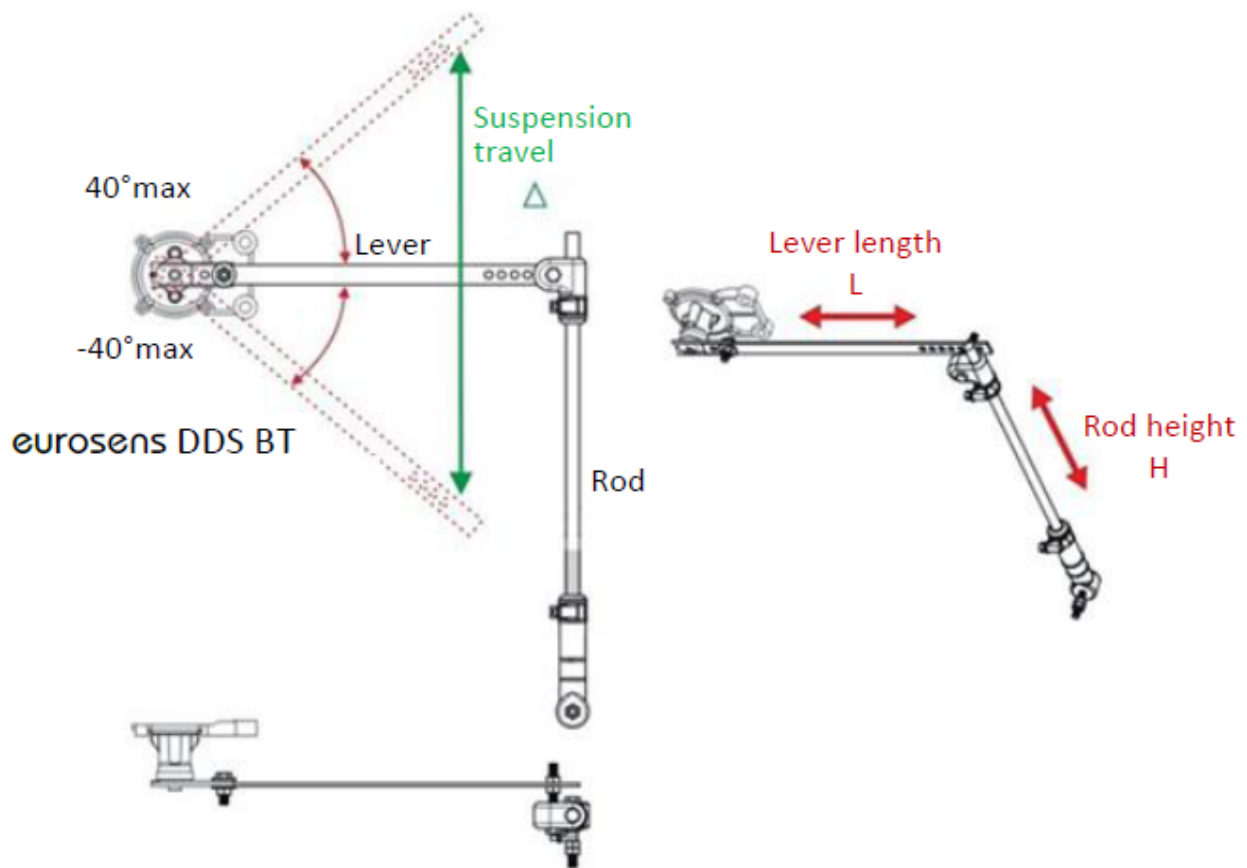

## How to configure Eurosens DDS BT with Mobile Application

Download and install the application “Configurator Dominator BT” from Google Play store.

[[File:Mobile application.jpg



Choose the protocol as shown below:



### Connection of the axle load sensor to the terminal

Put the sensors near the terminal.  
Make ‘Discovering’ of the sensors:



Fill the MAC address in the field:



## **GNOM DDE S7**

Configure the terminal for the data transfer from the axle load sensor:



Up to 4 GNOM DDE S7 sensors can be connected.  
The sensor settings are similar; you only need to change the MAC address.

None PGN number (63285);  
Temperature - temperature C0 GNOM DDE S7;  
Custom1 - Pressure in the pneumatic system, kPa;  
Custom2 - DTCs mask;  
Custom3 - Lateral acceleration m/s<sup>2</sup> (reserve);  
Custom4 - Longitudinal acceleration m/s<sup>2</sup> (reserve);  
Custom5 - Vertical acceleration m/s<sup>2</sup> (reserve);

Pneumatic pressure, temperatures, and DTCs mask are displayed in the configurator. Press Low button to select the parameter to be sent to the server.

BLE Temperature 1 - temperature C0;  
BLE Custom1 - pressure in the pneumatic system, kPa;  
BLE 1 Custom2 - DTCs mask.

Currently the accelerometer is not implemented in the current GNOM DDE S7 firmware:  
Custom3 - Lateral acceleration m/s<sup>2</sup> (reserve);  
Custom4 - Longitudinal acceleration m/s<sup>2</sup> (reserve);  
Custom5 - Vertical acceleration m/s<sup>2</sup> (reserve);  
FFFF (65535) values are transmitted on three planes.



## **GNOM DP S7**

Configure the terminal for the data transfer from the axle load sensor GNOM DP S7:



Up to 4 GNOM DP S7 sensors can be connected.  
The sensor settings are similar; you only need to change the MAC address.

None-number PGN (63304);  
Temperature - Temperature C0 GNOM DP S7;  
Custom1 - Deflection angle, degrees;  
Custom2 - DTCs mask.

Pneumatic pressure, temperatures, and DTCs mask are displayed in the configurator. Press Low button to select the parameter to be sent to the server.

BLE Temperature 1 - temperature C0;  
BLE Custom1 - pressure in the pneumatic system, kPa;

BLE 1 Custom2 - DTCs mask.



## Data on the telematics server

Sign in the terminal on the telematics server.  
Configure the temperature, pressure, DTCs mask sensors.

The data on the server will look like:

#	Time	Parameters	<input type="checkbox"/>
1	2020-08-14 08:53:17	io_25=2.4, io_463=0, io_331_dec=976, io_331=03D0	<input type="checkbox"/>
2	2020-08-14 08:53:47	io_25=2.4, io_463=0, io_331_dec=976, io_331=03D0	<input type="checkbox"/>
3	2020-08-14 08:54:17	io_25=2.4, io_463=0, io_331_dec=976, io_331=03D0	<input type="checkbox"/>

Sensors configuration:



## Temperature sensor configuration



## Configuration of the axle load sensor in the pneumatic system



Create a calculation table for the axle load. The ratio of the angle of rotation and axle load is obtained:



## DTCs mask sensor configuration



The data will look like this:

#	Time	Temperature	Exle load	DTCs mask	<input type="checkbox"/>
1	2020-08-14 08:53:17	24.00 °C	580.00 t	0.00	<input type="checkbox"/>
2	2020-08-14 08:53:47	24.00 °C	580.00 t	0.00	<input type="checkbox"/>
3	2020-08-14 08:54:17	24.00 °C	580.00 t	0.00	<input type="checkbox"/>