

Opening TCP/UDP port


Main steps to open ports:

- Locate your [router's IP address](#)
- Head over to your router's settings.
- Enter your credentials (username and password).
- Look around for the Port Forwarding tab.
- Open your preferred port—for example, type 8080 to open port 8080.
- Save your settings.

If steps above are not clear you may find additional information at: [How to Open Ports](#) , for more details information.

To check if port is open visit: [Port Check](#)

If you have Teltonika routers please visit: [How to open port on Teltonika's routers](#)

 || **NOTE: If you don't have any experience in IT or have some issue with opening ports please contact your IT specialist.**