

TAT100 Bluetooth® settings

[Main Page](#) > [Autonomous Trackers](#) > [TAT100](#) > [TAT100 Configuration](#) > **TAT100 Bluetooth® settings**



Contents

- [1 BLE Feature Sensors](#)
 - [1.1 Sensor](#)
 - [1.2 EYE Sensor](#)
 - [1.3 Eddystone](#)
 - [1.4 iBeacon](#)
- [2 BLE Feature Backup Tracker](#)
 - [2.1 Introduction to Backup Tracker functionality](#)
 - [2.2 Topology scheme](#)
 - [2.3 Backup feature logic](#)
 - [2.4 Instructions](#)

BLE Feature Sensors

Allows to configure universal or EYE sensors for data reading or BLE beacons for use with Recovery mode.



BLE Feature:

None - Bluetooth functionality will be disabled.

Sensors - Enables Bluetooth functionality for universal sensors, EYE Sensors and beacons.

Backup Tracker - Enables Backup Tracker

Update frequency - Sets BLE update frequency if Backup Tracker or BLE beacon is configured.

Scan for universal sensors or EYE Sensors is only performed with periodic or scheduled records. To increase BLE scan frequency when using universal sensors or EYE Sensors, Operand in IO elements needs to be configured.

AAS scenario - When enabled TAT device will only perform BLE scan while it is in "On Move" tracking scenario. While device is stationary BLE scan does not initiate.

Sensor

When Sensors mode is selected a table with configurable parameters will appear:



- The table has 9 types of parameters:
 1. Type - EIR data type. This parameter will indicate which type to look for and work with.

2. Data Offset - start index of data we are interested in.
3. Data Size - size of the data we are interested in. Limited to 2 bytes of data.
4. Action - two actions are possible: Match and Save. Match means that we want to perform a validation of certain data. Save means that we want to get certain data and later save it to an AVL record.
5. IO - tells which IO element's data will be saved to. **Used only with Save action.**
6. Match - hex string to be matched with BLE sensor data. **Used only with Match action.**
7. Endianness - endianness of data: little endian (ex. 0x1122) or big endian (ex. 0x2211). **Used only with Save action.**
8. Multiplier - value to be used to multiply output data. **Used only with Save action.**
9. Offset - value to be added to output data. **Used only with Save action.**

MAC - MAC address of the universal sensor.



Lost Sensor Alarm - When enabled TAT device will generate a record to notify that sensor has been lost. Required to be enabled for Recovery mode trigger "Lost BLE sensor" to work.

When universal sensor is lost TAT will send a record with event number that is the first configured IO element. In shown example if sensor is lost device will generate a record with event ID 29 (BLE Battery #1:29). If it was configured for second sensor, record will have event ID 20 (BLE Battery #2:20). Depending on the type of IO element this AVL ID will have one of two values:

- 4162 - if configured data is integer
- BEEF - if configured data is sent as HEX number.

EYE Sensor



When EYE Sensors mode is selected MAC address of the sensor will need to be entered.

MAC - MAC address of the EYE Sensor.

Lost Sensor Alarm - When enabled TAT device will generate a record to notify that EYE Sensor has been lost. Required to be enabled for Recovery mode trigger "Lost BLE sensor" to work.

- AVL ID 463, value BEEF - Lost BLE1 EYE Sensor.
- AVL ID 467, value BEEF - Lost BLE2 EYE Sensor.
- AVL ID 471, value BEEF - Lost BLE3 EYE Sensor.
- AVL ID 475, value BEEF - Lost BLE4 EYE Sensor.

Please note:



- If Lost Sensor Alarm is **disabled** and sensor is **not found during a scan** IO element will contain value:
- **32767** - temperature IO
 - **65535** - humidity IO

When EYE Sensor is configured, TAT device will automatically map data to below IO elements -

Sensor Data	IO Element	AVL ID
EYE Sensor 1 Temperature	BLE Temp #1	25

EYE Sensor 1 Battery	BLE Battery #1	29
EYE Sensor 1 Humidity	BLE Humidity #1	86
EYE Sensor 1 Flags	BLE1 Custom #1	331
EYE Sensor 1 Movement Counter	BLE1 Custom #2	463
EYE Sensor 1 Angle (pitch)	BLE1 Custom #3	464
EYE Sensor 1 Angle (roll)	BLE1 Custom #4	465
EYE Sensor 2 Temperature	BLE Temp #2	26
EYE Sensor 2 Battery	BLE Battery #2	20
EYE Sensor 2 Humidity	BLE Humidity #2	104
EYE Sensor 2 Flags	BLE2 Custom #1	332
EYE Sensor 2 Movement Counter	BLE2 Custom #2	467
EYE Sensor 2 Angle (pitch)	BLE2 Custom #3	468
EYE Sensor 2 Angle (roll)	BLE2 Custom #4	469
EYE Sensor 3 Temperature	BLE Temp #3	27
EYE Sensor 3 Battery	BLE Battery #3	22
EYE Sensor 3 Humidity	BLE Humidity #3	106
EYE Sensor 3 Flags	BLE3 Custom #1	333
EYE Sensor 3 Movement Counter	BLE3 Custom #2	471
EYE Sensor 3 Angle (pitch)	BLE3 Custom #3	472
EYE Sensor 3 Angle (roll)	BLE3 Custom #4	473
EYE Sensor 4 Temperature	BLE Temp #4	28
EYE Sensor 4 Battery	BLE Battery #4	23
EYE Sensor 4 Humidity	BLE Humidity #4	108
EYE Sensor 4 Flags	BLE4 Custom #1	334
EYE Sensor 4 Movement Counter	BLE4 Custom #2	475
EYE Sensor 4 Angle (pitch)	BLE4 Custom #3	476
EYE Sensor 4 Angle (roll)	BLE4 Custom #4	477

Eddystone



When Eddystone mode is selected Namespace and Instance IDs will be configurable. Configuring both parameters is not mandatory. If one of the parameters is left empty TAT will find beacons matching other provided parameter. It is also possible to configure only part of a parameter (for example only 10 Namespace ID symbols instead of 20). During BLE scan device needs to **find at least one beacon (even if 4 different connections are configured)**. Scanning for BLE beacons is initiated every Update Frequency. Scan will take up to 60 seconds and will end early if at least one beacon is found.

If **no beacons are found** during a BLE scan, device will wake up, acquire location based on

configuration and send a record to configured server. This record will have **event AVL ID 20014 with a value of 3**.

This functionality can also trigger Recovery mode. Device will send lost beacon event and then go into Recovery mode.

iBeacon



When iBeacon mode is selected UUID, Major ID and Minor IDs will be configurable. Configuring all parameters is not mandatory. If one of the parameters is left empty TAT will find beacons matching other provided parameter. It is also possible to configure only part of a parameter (for example only 20 UUID symbols instead of 32). During BLE scan device needs to **find at least one beacon (even if 4 different connections are configured)**. Scanning for BLE beacons is initiated every Update Frequency. Scan will take up to 60 seconds and will end early if at least one beacon is found.

If **no beacons are found** during a BLE scan, device will wake up, acquire location based on configuration and send a record to configured server. This record will have **event AVL ID 20014 with a value of 3**.

This functionality can also trigger Recovery mode. Device will send lost beacon event and then go into Recovery mode.

BLE Feature Backup Tracker

Introduction to Backup Tracker functionality


TAT devices support a feature which allows them to work as a Backup Tracker.

1. If main tracker ([Compatibility table](#)) is turned off, Alarm event from the TAT100 will be received and AVL 236 in the data packet will be sent.
2. Even if Backup tracker is in alarm mode, TAT device will continue to track its position as configured.

Topology scheme



Backup feature logic

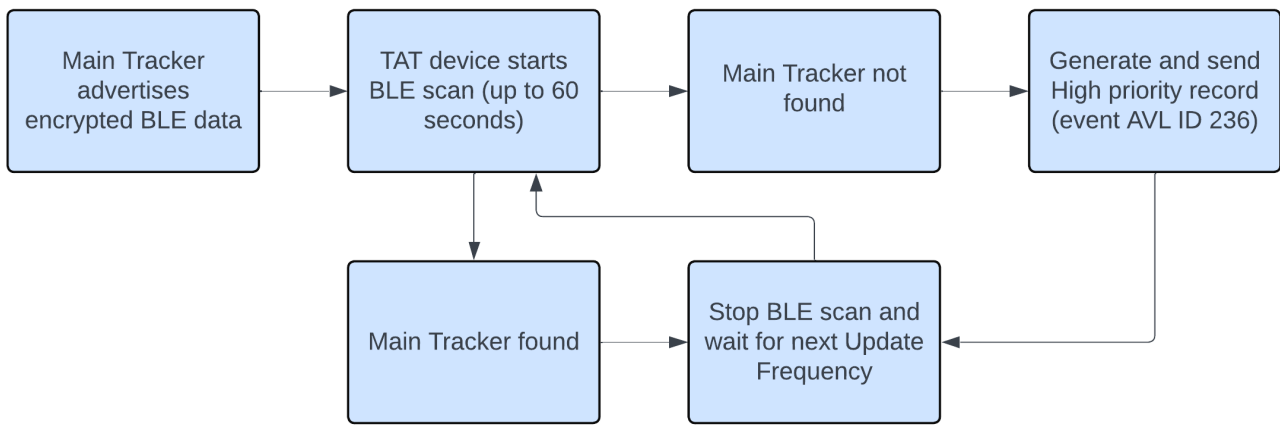

NOTE:

If TAT does not pick up advertised data packets from main tracker, TAT100 generates and sends a record with AVL ID 236 (Value 1). After sending this record, device will wait for the next Update Frequency and will keep generating records with event ID 236 until main tracker is found again. No record is generated if main tracker can be located during a BLE scan.

Parameter Name	Description	Parameter ID	Parameter Value
BLE Feature	Select which BLE feature is enabled. Backup tracker or Sensors can be selected (not both)	189	0 - None 1 - Backup Tracker 2 - Sensors
IMEI of Central Device	IMEI of main tracker that TAT is scanning for	190	Valid IMEI number
Update Frequency	Time in seconds for scanning intervals	1100	Min 30 sec. Max 65535 sec. Default 120 sec.

Instructions


To ENABLE backup feature on TAT device:

1. Bluetooth → select Backup Tracker
2. Enter main device (FMBxxx/TFT100/TST100/GH5200/TMT250) IMEI
3. Set **Update frequency** - (We recommend to set update frequency to >3600 sec. Frequent BLE scanning will reduce battery life.)




To ENABLE backup feature on main tracker:

1. Bluetooth → BT Radio set to Enable (visible)

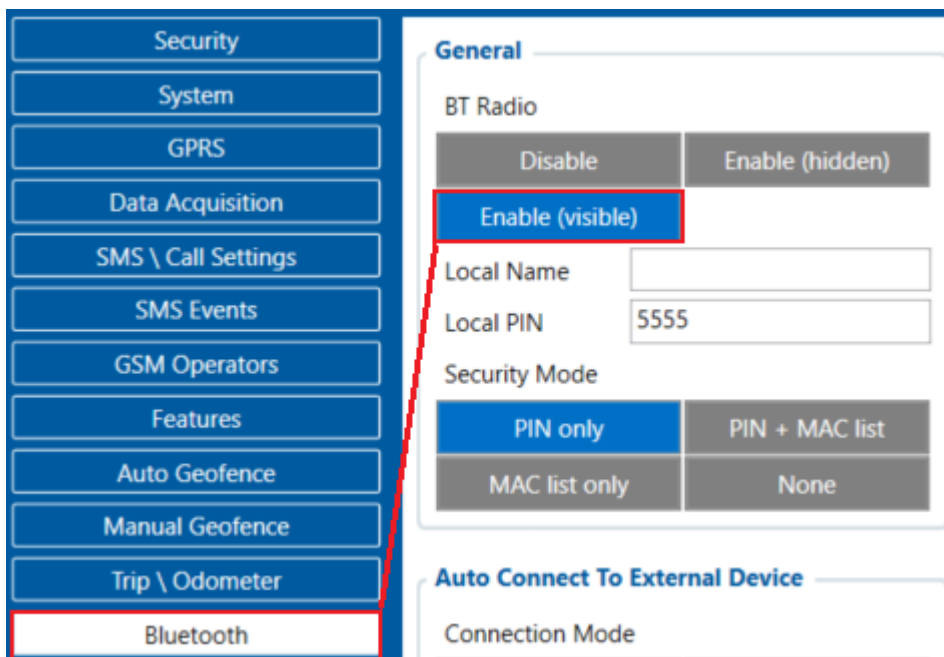

2. ENABLE backup feature on:

1. **TFT100 | TST100 | GH5200 | TMT250** devices
Bluetooth 4.0 → Backup Tracker set to Enabled

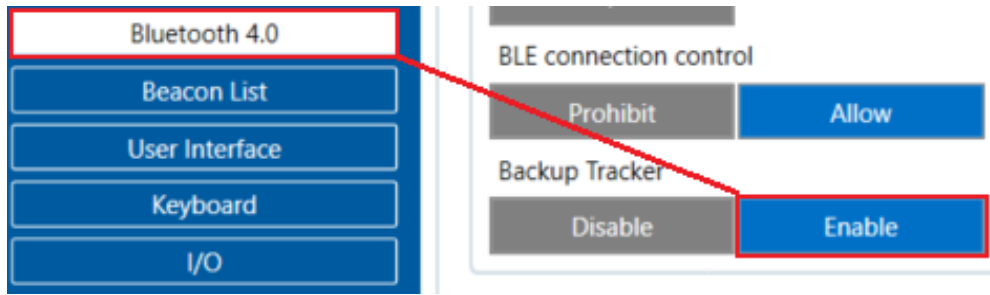

2. **FMBXXX** devices

BLE connection control needs to be set to Prohibit for Backup Tracker feature to become visible.

