

# TAT240 Parameter list

[Main Page](#) > [Autonomous Trackers](#) > [TAT240](#) > [TAT240 Manual](#) > **TAT240 Parameter list**



## Contents

- [1 System parameters](#)
  - [1.1 System Settings](#)
- [2 GPRS](#)
  - [2.1 GPRS Settings](#)
  - [2.2 Server Settings](#)
  - [2.3 Records Settings](#)
  - [2.4 FOTA WEB Settings](#)
- [3 SMS/Call Settings](#)
  - [3.1 SMS Commands](#)
- [4 GSM Operations](#)
  - [4.1 Common settings](#)
- [5 Features](#)
  - [5.1 Tamper detection](#)
- [6 Tracking](#)
  - [6.1 Tracking Scenarios](#)
  - [6.2 Scheduler](#)
- [7 I/O](#)

## System parameters

### System Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		

<b>109</b>	Uint8	10	1	15	0 - Undefined 1 - Beidou only 2 - Glonass only 3 - Glonass and Beidou not allowed 4 - Galileo only 5 - Galileo and Beidou 6 - Galileo and Glonass 7 - Galileo, Glonass and Beidou not allowed 8 - Gps only 9 - Gps and Beidou 10 - Gps and Glonass 11 - Gps, Glonass and Beidou not allowed 12 - Gps and Galileo 13 - Gps, Galileo and Beidou 14 - Gps, Galileo and Glonass 15 - Gps, Galileo, Glonass and Beidou and not allowed	GNSS source
<b>187</b>	Uint8	5	0	30	Seconds	Coordinate Acquisition Timeout (s)
<b>106</b>	Uint16	1	0	1	0 - Disable 1 - Enable	Static Navigation
<b>902</b>	Char	"avl1.teltonika.lt"	0	55	String	NTP server 1
<b>903</b>	Char	"pool.ntp.org"	0	55	String	NTP server 2

## GPRS

### GPRS Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>2000</b>	Uint8	1	0	1	0 - Disable 1 - Enable	GPRS context
<b>2001</b>	Char	""	0	32	String	APN
<b>2002</b>	Char	""	0	32	String	APN username
<b>2003</b>	Char	""	0	32	String	APN password
<b>2016</b>	Uint8	0	0	1	0 - Normal (PAP) 1 - Secured (CHAP)	-

### Server Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>2004</b>	Char	""	0	55	String	Domain
<b>2005</b>	Uint16	0	0	65535	Number	Port
<b>2006</b>	Uint8	0	0	1	0 - TCP 1 - UDP	Protocol

## Records Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
1002	UInt8	1	0	1	0 - Newest 1 - Oldest	Sort by
1004	UInt8	1	0	1	0 - TCP/IP 1 - AVL	ACK Type

## FOTA WEB Settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
13003	UInt8	1	0	1	0 - Disable 1 - Enable	FOTA WEB Status
13000	Char	fota.teltonika.lt	0	55	String	FOTA WEB Domain
13001	UInt16	5000	0	65535	Number	FOTA WEB Port

## SMS/Call Settings

### SMS Commands

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
3003	Char	""	0	5	String	Login
3004	Char	""	0	5	String	Password

## GSM Operations

### Common settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
2018	UInt8	0	0	1	0 - Disable 1 - Enable	Ban List Control

## Features

### Tamper detection

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
290	boolean	0	0	1	0 - Disabled 1 - Enabled	Tamper Detection

<b>291</b>	UInt8	1	0	15	0 - Invalid value 1 - Removed 2 - Attached 4 - Attached on surface 8 - Removed from Surface Other values are a sum of different state numbers. For example, if you want to configure Removed from Surface and Removed together, just add state numbers and the value will be 9. To detect all states, value is 15	Tamper Detection Event
<b>292</b>	UInt8	0	0	1	0 - Event only 1 - Event and Fix	Record type
<b>293</b>	UInt8	0	0	4	0 - None 1 - Removed 2 - Attached 3 - Attached on surface 4 - Removed from surface	Recovery Mode Triggering Tamper Event

# Tracking

## Tracking Scenarios

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>184</b>	UInt8	2	0	2	0 - Backup Tracker 1 - Periodic 2 - Scheduler	Tracking mode

<b>3006</b>	UInt8	0	-720	840	-720 - UTC-12:00 -690 - UTC-11:30 -660 - UTC-11:00 -630 - UTC-10:30 -600 - UTC-10:00 -570 - UTC-09:30 -540 - UTC-09:00 -510 - UTC-08:30 -480 - UTC-08:00 -450 - UTC-07:30 -420 - UTC-07:00 -390 - UTC-06:30 -360 - UTC-06:00 -330 - UTC-05:30 -300 - UTC-05:00 -270 - UTC-04:30 -240 - UTC-04:00 -210 - UTC-03:30 -180 - UTC-03:00 -150 - UTC-02:30 -120 - UTC-02:00 -90 - UTC-01:30 -60 - UTC-01:00 -30 - UTC-00:30 0 - UTC+00:00 30 - UTC+00:30 60 - UTC+01:00 90 - UTC+01:30 120 - UTC+02:00 150 - UTC+02:30 180 - UTC+03:00 210 - UTC+03:30 240 - UTC+04:00 270 - UTC+04:30 300 - UTC+05:00 330 - UTC+05:30 360 - UTC+06:00 390 - UTC+06:30 420 - UTC+07:00 450 - UTC+07:30 480 - UTC+08:00 510 - UTC+08:30 540 - UTC+09:00 570 - UTC+09:30 600 - UTC+10:00 630 - UTC+10:30 660 - UTC+11:00 690 - UTC+11:30 720 - UTC+12:00 750 - UTC+12:30 780 - UTC+13:00 810 - UTC+13:30 840 - UTC+14:00	UTC Time Zone
<b>185</b>	UInt8	28800	360	259200	Seconds	On Stop (s)
<b>186</b>	UInt8	28800	360	259200	Seconds	On Moving (s)

196	UInt8	1	1	10	1 - None 2 - Tamper 4 - Lost BLE sensor 6 - Tamper & Lost BLE sensor 8 - Backup Tracker 10 - Tamper & Backup Tracker	Recovery Mode
197	UInt8	180	30	28800	Seconds	Period(s)

## Scheduler

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name	Day Of The Week
			Min	Max			
2600	UInt8	0	0	1	0 - OFF 1 - ON	Day Of The Week	Monday
2500	UInt8	0	0	5	0 - 1 1 - 2 2 - 3 3 - 4 4 - 5 5 - 6	Records per day	
2510	UInt8	1200	0000	2359	time	1st Record	
2511	UInt8	1200	0000	2359	time	2nd Record	
2512	UInt8	1200	0000	2359	time	3rd Record	
2513	UInt8	1200	0000	2359	time	4th Record	
2514	UInt8	1200	0000	2359	time	5th Record	
2515	UInt8	1200	0000	2359	time	6th Record	

**IMPORTANT:** 4 digits representing time in 24 hours format. For example: 1826 will be 18h 26 min. Note, that value can not be an invalid time like 1899.

Similarly to a group defined in the upper table:

Day Of The Week	Parameter ID							
	Day	Records per day	1st	2nd	3rd	4th	5th	6th
Monday	2600	2500	2510	2511	2512	2513	2514	2515
Tuesday	2601	2501	2520	2521	2522	2523	2524	2525
Wednesday	2602	2502	2530	2531	2532	2533	2534	2535
Thursday	2603	2503	2540	2541	2542	2543	2544	2545
Friday	2604	2504	2550	2551	2552	2553	2554	2555
Saturday	2605	2505	2560	2561	2562	2563	2564	2565
Sunday	2606	2506	2570	2571	2572	2573	2574	2575

## I/O

Parameter ID	Parameter Type	Default value	Value range		Value	parameter	Input Name
			Min	Max			

50020	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Data Mode
50023	UInt8	0	0	0	-	Low Level	
50022	UInt8	0	0	5	-	High Level	
50024	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50021	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7002	UInt8	0	0	10	Predefined Number	Send SMS To	
8002	String	Data Mode	0	160	Predefined Number	SMS Text	
50030	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	GSM Signal
50033	UInt8	0	0	0	-	Low Level	
50032	UInt8	0	0	5	-	High Level	
50034	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50031	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50035	UInt16	7	0	65535	-	Average Const	
7003	UInt8	0	0	10	Predefined Number	Send SMS To	
8003	String	GSM Signal	0	160	Predefined Number	SMS Text	
50050	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	GNSS Status
50053	UInt8	0	0	0	-	Low Level	
50052	UInt8	0	0	5	-	High Level	
50054	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50051	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7005	UInt8	0	0	10	Predefined Number	Send SMS To	
8005	String	GNSS Power	0	160	Predefined Number	SMS Text	

50060	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	GNSS PDOP
50063	UInt8	0	0	0	-	Low Level	
50062	UInt8	0	0	1000	-	High Level	
50064	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50061	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50065	UInt16	10	0	65535	-	Average Const	
7006	UInt8	0	0	10	Predefined Number	Send SMS To	
8006	String	GNSS PDOP	0	160	Predefined Number	SMS Text	
50070	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	GNSS HDOP
50073	UInt8	0	0	0	-	Low Level	
50072	UInt8	0	0	1000	-	High Level	
50074	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50071	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50075	UInt16	10	0	65535	-	Average Const	
7007	UInt8	0	0	10	Predefined Number	Send SMS To	
8007	String	GNSS HDOP	0	160	Predefined Number	SMS Text	
50090	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Speed
50093	UInt8	0	0	0	Km/h	Low Level	
50092	UInt8	0	0	300	Km/h	High Level	
50094	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50091	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50095	UInt16	1	0	65535	-	Average Const	
7009	UInt8	0	0	10	Predefined Number	Send SMS To	
8009	String	Speed	0	160	Predefined Number	SMS Text	



50100	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	GSM Cell ID
50103	UInt8	0	0	0	-	Low Level	
50102	UInt8	0	0	999999	-	High Level	
50104	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50101	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	GSM Area Code
7010	UInt8	0	0	10	Predefined Number	Send SMS To	
8010	String	GSM Cell ID	0	160	Predefined Number	SMS Text	
50110	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	
50113	UInt8	0	0	0	-	Low Level	Battery Voltage
50112	UInt8	0	0	999999	-	High Level	
50114	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50111	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7011	UInt8	0	0	10	Predefined Number	Send SMS To	Battery Voltage
8011	String	GSM Area Code	0	160	Predefined Number	SMS Text	
50120	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	
50123	UInt8	0	0	5000/11000 (LiPo/NiMh)	mV	Low Level	
50122	UInt8	0	0	5000/11000 (LiPo/NiMh)	mV	High Level	Battery Voltage
50124	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50121	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
50125	UInt16	10	0	65535	-	Average Const	
7012	UInt8	0	0	10	Predefined Number	Send SMS To	Battery Voltage
8012	String	Battery Voltage	0	160	Predefined Number	SMS Text	

50140	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Active GSM Operator
50143	UInt8	0	0	0	-	Low Level	
50142	UInt8	0	0	9999999	-	High Level	
50144	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
50141	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	ICCID
7014	UInt8	0	0	10	Predefined Number	Send SMS To	
8014	String	Active GSM Operator	0	160	Predefined Number	SMS Text	
50250	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	
50254	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	Instant Movement
50251	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7069	UInt8	0	0	10	Predefined Number	Send SMS To	
8069	String	ICCID Value	0	160	Predefined Number	SMS Text	
51050	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Coordinates ISO6709
51053	UInt8	0	0	0	-	Low Level	
51052	UInt8	0	0	1	-	High Level	
51054	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
51051	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	Coordinates ISO6709
51055	UInt16	10	0	65535	-	Average Const	
7286	UInt8	0	0	10	Predefined Number	Send SMS To	
8286	String	Instant Movement	0	160	Predefined Number	SMS Text	
51730	UInt8	0	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	Coordinates ISO6709
51734	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
51731	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
7376	UInt8	0	0	10	Predefined Number	Send SMS To	
8376	String	ISO6709 Coordinates	0	160	Predefined Number	SMS Text	

<b>50010</b>	UInt8	1	0	3	0 - None 1 - Low 2 - High 3 - Panic	Priority	<b>Movement</b>
<b>50013</b>	UInt8	0	0	0	-	Low Level	
<b>50012</b>	UInt8	0	0	1	-	High Level	
<b>50014</b>	UInt8	0	0	1	0 - No 1 - Yes 2 - Crash	Event Only	
<b>50011</b>	UInt8	3	0	6	0 - On Exit 1 - On Entrance 2 - On Both 3 - Monitoring 4 - On Hysteresis 5 - On Change 6 - On Delta Change	Operand	
<b>50015</b>	UInt16	10	0	65535	-	Average Const	
<b>7001</b>	UInt8	0	0	10	Predefined Number	Send SMS To	
<b>8001</b>	String	Movement	0	160	Predefined Number	SMS Text	