TLS/DTLS Instructions for Flespi using OPEN SSL

Contents

- 1 General Information
- 2 Introduction:
- 3 Requirements:
- 4 Installing OpenSSL Software

General Information

Introduction:

Requirements:

- 1. Windows OS (XP, 7, 10, 11)
- 2. Open-SSL software.
- 3. Teltonika Telematics device which supports TLS/DTLS (Supported versions: 1.1/1.2)
- 4. Flespi channel with TLS/DTLS support. (Or any server that supports TLS/DTLS)
- 5. Noted or Notepad ++ (Optional)

Installing OpenSSL Software

- 1. Download the OpenSSL software here
- 2. Download EXE or MSI for Win64 OpenSSL v3.0.7. Win64 OpenSSL v3.0.7 is the latest version of OpenSSL when this test report is created.
- 3. Open the EXE or MSI application with administrator privilege.



License Agreement

Please read the following important information before continuing.



Please read the following License Agreement. You must accept the terms of this agreement before continuing with the installation.

DONATIONS NEEDED! If you are a business you should be contributing regular donations. If you are a generous individual, consider regular donations. Most people simply take and run - leaving me to foot the bill. That's not nice. Some businesses even drop their customers onto me to provide direct support to the customer (ahem, PayPal). That's also not nice. Even if you can't afford a small, one time donation of \$10, at least drop a line saying how much you appreciate the effort put into this project (and, optionally, what you use OpenSSL for). Lots of complaints and few compliments is discouraging.

LEGAL NOTICE: This product includes software developed by the OpenSSL

■ I accept the agreement

I do not accept the agreement

Next >

Cancel