

TachoSync Company Card Authenticator

[TachoSync](#) > TachoSync Company Card Authenticator



Contents

- [1 Overview](#)
- [2 Purpose](#)
- [3 Company Card Authenticator requirements](#)
- [4 Downloading and installing](#)

Overview

To authenticate with the tachograph remotely you would need to download Company Card Authenticator. It is a Teltonika's built application that uses company card data to authenticate with the tachograph. In this page you will find information on system requirements that are necessary for downloading this a software. Furthermore, you will learn where to find, download and install Company Card Authenticator.

Purpose

Company Card Authenticator is a software that is used to perform remote authentication with a tachograph to perform DDD file download.

Company Card Authenticator requirements

OS	Windows 10; Windows 11
CPU:	Intel or AMD processor with 64-bit support
Disk Storage:	500 MB of free disk space
Internet:	An Internet connection is required for CCA connection to Tacho Sync
How to download:	You can download the CCA application once logged in to Tacho Sync (by navigating to Settings >> Download Company Card Authenticator).

Downloading and installing

To start using Company Card Authenticator follow these steps:

1. Go to TachoSync web page. TachoSync link: <https://tacho.teltonika.lt/dashboard>
2. Go to settings and select Company Card Authenticator. The download should start shortly after.



3. Open downloaded file and this tab should pop up. Press *Next* on it



4. Agree with the terms and services and press *Next*



5. Change directory if needed and then press *Install*

