

# Talk:AT Commands

I cannot use this command

## **gsmget**

with the parameters:

- p, --ip <INTERFACE> Get IP of logical interface
- e, --bsent <INTERFACE> Get number of bytes sent
- r, --brecv <INTERFACE> Get number of bytes recieved

What is the content of the <INTERFACE> ?

Can you provide a sample command ?

thanks

Alessandro Annunziato

PS: Also, I would like to note that there s a recurring typo, also in your interface for 'received' that is misspelled