

[https://wiki.teltonika-gps.com/view/Talk:FMB920\\_System\\_settings](https://wiki.teltonika-gps.com/view/Talk:FMB920_System_settings)

## Talk:FMB920 System settings

Good afternoon, I need some help regarding "ignition source" in System setting of the teltonika configurator for FMB920. Does anybody know how the four options "DIN1", "Accelerometer" "Power voltage" and "Engine RPM" are combined? How does I/O 1 (digital input) works?