

# Technoton GNOM DDE/DP S7 Axle Load Sensors

[Main Page](#) > [Accessories](#) > Technoton GNOM DDE/DP S7 Axle Load Sensors



## Contents

- [1 Introduction to the product](#)
- [2 Declaration of Compatibility](#)
- [3 GNOM DDE/DP S7 axle load sensor connection](#)
- [4 Teltonika FMB connection](#)
- [5 Terminal configuration and fuel level sensor calibration](#)
  - [5.1 Terminal settings in the Configurator](#)
  - [5.2 Connection of the axle load sensor to the terminal](#)
    - [5.2.1 GNOM DDE S7](#)
    - [5.2.2 GNOM DP S7](#)
- [6 Data on the telematics server](#)
  - [6.1 Temperature sensor configuration](#)
  - [6.2 Configuration of the axle load sensor in the pneumatic system](#)
  - [6.3 DTCs mask sensor configuration](#)

## Introduction to the product

GNOM DDE S7 and GNOM DP S7 Axle Load Sensors connected to FMB using the Bluetooth® interface.



## Declaration of Compatibility



## GNOM DDE/DP S7 axle load sensor connection

GNOM DDE S7 axle load sensor is to be switched to the Working mode according to the operation manual.

To obtain the MAC address of the GNOM DDE S7 axle load sensor, you need to transfer the sensor number from decimal to hexadecimal code.

1 105 001 300 011	
HEX	101 4735 C02B
DEC	1 105 001 300 011
OCT	20 050 715 340 053
BIN	0001 0000 0001 0100 0111 0011 0101 1100 0000 0010 1011
	WORD      QWORD      MS      M <sup>+</sup>

## Teltonika FMB connection

Insert a SIM card and supply power to the TELTONIKA terminal.

**NOTE:** Firmware 03.27.01 Rev:00 or latest.

## Terminal configuration and fuel level sensor calibration

### Terminal settings in the Configurator

Configure the GPRS data of the SIM card operator and the address of the telematic server:

**NOTE:** Configurator v1.6.4B.3.27 R2 or latest according to the firmware version.

Choose the protocol as shown below:



### Connection of the axle load sensor to the terminal

Put the sensors near the terminal.

Make 'Discovering' of the sensors:



Fill the MAC address in the field:



### GNOM DDE S7

Configure the terminal for the data transfer from the axle load sensor:



Up to 4 GNOM DDE S7 sensors can be connected.

The sensor settings are similar; you only need to change the MAC address.

None PGN number (63285);

Temperature - temperature C0 GNOM DDE S7;

Custom1 - Pressure in the pneumatic system, kPa;

Custom2 - DTCs mask;

Custom3 - Lateral acceleration m/s<sup>2</sup> (reserve);

Custom4 - Longitudinal acceleration m/s<sup>2</sup> (reserve);

Custom5 - Vertical acceleration m/s<sup>2</sup> (reserve);

Pneumatic pressure, temperatures, and DTCs mask are displayed in the configurator. Press Low button to select the parameter to be sent to the server.

BLE Temperature 1 - temperature C0;

BLE Custom1 - pressure in the pneumatic system, kPa;

BLE 1 Custom2 - DTCs mask.

Currently the accelerometer is not implemented in the current GNOM DDE S7 firmware:

Custom3 - Lateral acceleration m/s<sup>2</sup> (reserve);

Custom4 - Longitudinal acceleration m/s<sup>2</sup> (reserve);

Custom5 - Vertical acceleration m/s<sup>2</sup> (reserve);

FFFF (65535) values are transmitted on three planes.



## GNOM DP S7

Configure the terminal for the data transfer from the axle load sensor GNOM DP S7:



Up to 4 GNOM DP S7 sensors can be connected.

The sensor settings are similar; you only need to change the MAC address.

None-number PGN (63304);

Temperature - Temperature C0 GNOM DP S7;

Custom1 - Deflection angle, degrees;

Custom2 - DTCs mask.

Pneumatic pressure, temperatures, and DTCs mask are displayed in the configurator. Press Low button to select the parameter to be sent to the server.

BLE Temperature 1 - temperature C0;

BLE Custom1 - pressure in the pneumatic system, kPa;

BLE 1 Custom2 - DTCs mask.



# Data on the telematics server

Sign in the terminal on the telematics server.

Configure the temperature, pressure, DTCs mask sensors.

The data on the server will look like:

#	Time	Parameters	
1	2020-08-14 08:53:17	io_25=2.4, io_463=0, io_331_dec=976, io_331=03D0	<input type="checkbox"/>
2	2020-08-14 08:53:47	io_25=2.4, io_463=0, io_331_dec=976, io_331=03D0	<input type="checkbox"/>
3	2020-08-14 08:54:17	io_25=2.4, io_463=0, io_331_dec=976, io_331=03D0	<input type="checkbox"/>

Sensors configuration:



## Temperature sensor configuration



## Configuration of the axle load sensor in the pneumatic system



Create a calculation table for the axle load. The ratio of the angle of rotation and axle load is obtained:



## DTCs mask sensor configuration



The data will look like this:

#	Time	Temperature	Axle load	DTCs mask	
1	2020-08-14 08:53:17	24.00 °C	580.00 t	0.00	<input type="checkbox"/>
2	2020-08-14 08:53:47	24.00 °C	580.00 t	0.00	<input type="checkbox"/>
3	2020-08-14 08:54:17	24.00 °C	580.00 t	0.00	<input type="checkbox"/>