

Template:AVL ID List - RS485 communication I/O elements

RS485 communication I/O elements

SuperSoco I/O elements

Property ID in AVL packet	Property Name	Bytes	Type	Value range		Multiplier	Units	Description	HW Support	Parameter Group
				Min	Max					
855	Power	1	Unsigned	0	1	-	-	0 - Power Off 1 - Power ON	TFT100	RS485 SUPERSOCO
856	Current Trip Range	4	Unsigned	0	0	-	-	Current trip Range IO element indicates currently measured current range	TFT100	RS485 SUPERSOCO
857	Total Trip Range	4	Unsigned	0	0	-	-	Total trip Range IO element indicates currently measured total range	TFT100	RS485 SUPERSOCO
858	Battery Capacity	1	Unsigned	0	255	-	-	Battery capacity I/O element shows battery capacity left.	TFT100	RS485 SUPERSOCO
859	Low Voltage	1	Unsigned	0	1	-	-	Low Voltage status	TFT100	RS485 SUPERSOCO
860	High Temperature	1	Unsigned	0	1	-	-	High Temperature status	TFT100	RS485 SUPERSOCO
861	Upload Time	1	Unsigned	0	1	-	-	Upload time status	TFT100	RS485 SUPERSOCO
862	Moving Abnormal	1	Unsigned	0	1	-	-	Moving abnormal status	TFT100	RS485 SUPERSOCO
863	Range	2	Unsigned	0	65535	-	km	Range indicator	TFT100	RS485 SUPERSOCO
864	Lock Status	1	Unsigned	0	1	-	-	Lock status	TFT100	RS485 SUPERSOCO
865	Vehicle FW version	2	Unsigned	0	65535	-	-	Vehicle FW version	TFT100	RS485 SUPERSOCO
866	Total Range	4	Unsigned	0	0	-	m	Total range indicator	TFT100	RS485 SUPERSOCO
867	Battery Energy	2	Unsigned	0	0	-	kW*h	Battery Energy indicator	TFT100	RS485 SUPERSOCO
868	Power System Error	8	Unsigned	-	-	-	-		TFT100	RS485 SUPERSOCO
869	Power Train Error	8	Unsigned	-	-	-	-		TFT100	RS485 SUPERSOCO
870	Instrument System Error	8	Unsigned	-	-	-	-		TFT100	RS485 SUPERSOCO