

# Template:FM36M1 GSM settings, operator list

Operators list - FM36YX can work in different modes (use different settings) according to the operator list defined. Operator list is used for Data Acquisition Mode switching ([Data Acquisition Mode settings](#) for more details). Modes are changed based on 4G/GSM operator FM36YX is connected to.



If operator list is left empty, it will allow using GPRS to any GSM operator. Please note that FM36YX will work in Unknown mode only (make sure it is configured to allow data sending - GPRS context is enabled).