

https://wiki.teltonika-gps.com/view/Template:FM36YX_Monitoring

Template:FM36YX Monitoring

I/O monitoring starts after enabling I/O element and setting up I/O parameters as it is shown below:

System	I/O							
	Property Input	Enabled	Priority	Low Level	High Level	Units	Generate Event	Averaging Constant
Records	Digital input 1	<input checked="" type="checkbox"/>	Low	0 ▲	1 ▲		Monitoring	10 ▲
GSM	Digital input 2	<input type="checkbox"/>	Disat	0 ▲	0 ▲		Monitoring	10 ▲
DataAcquisitionModes	Digital input 3	<input type="checkbox"/>	Disat	0 ▲	0 ▲		Monitoring	10 ▲
Features	Digital input 4	<input type="checkbox"/>	Disat	0 ▲	0 ▲		Monitoring	10 ▲
IO	Analog input 1	<input type="checkbox"/>	Disat	0 ▲	0 ▲		Monitoring	2 ▲
LVCAN	Digital output 1	<input type="checkbox"/>	Disat	0 ▲	0 ▲		Monitoring	10 ▲
	Digital output 2	<input type="checkbox"/>	Disat	0 ▲	0 ▲		Monitoring	10 ▲
	GNSS PDOP	<input type="checkbox"/>	Disat	0 ▲	0 ▲		Monitoring	10 ▲
	GNSS HDOP	<input type="checkbox"/>	Disat	0 ▲	0 ▲		Monitoring	10 ▲