

Template:FM36YX Monitoring

I/O monitoring starts after enabling I/O element and setting up I/O parameters as it is shown below:

System	I/O							
Records	Property Input	<input type="checkbox"/> Enabled	Priority	Low Level	High Level	Units	Generate Event	Averaging Constant
GSM	Digital input 1	<input checked="" type="checkbox"/>	Low	0	1		Monitoring	10
DataAcquisitionModes	Digital input 2	<input type="checkbox"/>	Disab	0	0		Monitoring	10
Features	Digital input 3	<input type="checkbox"/>	Disab	0	0		Monitoring	10
I/O	Digital input 4	<input type="checkbox"/>	Disab	0	0		Monitoring	10
LVCAN	Analog input 1	<input type="checkbox"/>	Disab	0	0		Monitoring	2
	Digital output 1	<input type="checkbox"/>	Disab	0	0		Monitoring	10
	Digital output 2	<input type="checkbox"/>	Disab	0	0		Monitoring	10
	GNSS PDOP	<input type="checkbox"/>	Disab	0	0		Monitoring	10
	GNSS HDOP	<input type="checkbox"/>	Disab	0	0		Monitoring	10