

Template:FMA2Li Connecting power wires

1. Device should be connected directly to battery. Power supply: 6V/12V/24V.
2. If FMB2YX is used in 6V system and power cables are extended.

Extension cable resistance should be less than 60 mΩ in sum of both, positive and negative, wires.
30 mΩ for single wire.

