

# Template:FMB1 Without battery



GNSS/GSM/Bluetooth tracker with internal GNSS/GSM antennas



## Contents


- [1 How to insert Micro-SIM card and connect the battery](#)
- [2 How to insert microSD card](#)

## How to insert Micro-SIM card and connect the battery

1. Gently remove FMB1YX **cover** using **plastic pry tool** from both sides.
2. Insert **Micro-SIM** card as shown with **PIN request disabled** or read [Security info](#) how to enter it later in [Teltonika Configurator](#). Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot. **SIM slot 1** is closer to PCB, **SIM slot 2** is the upper one.
3. Connect **battery** as shown to device. Position the battery in place where it does not obstruct other components.
4. After **configuration**, see "[PC Connection \(Windows\)](#)", attach device **cover** back.



**Micro-SIM card insertion/removal must be performed when device is powered off -**

-  **external voltage and internal battery disconnected. Otherwise Micro-SIM card might be damaged or device will not detect it.**

## How to insert microSD card

1. Push microSD card lock case.
2. Open microSD card locker.
3. Correctly insert microSD card into slot.
4. Close microSD card locker.
5. Push microSD card lock case to locked position.

