


Template:FMB2 GSM Operators settings

 In *SIM2 Roaming/Home Operator* list home operator must be added to the any part of the list that functionality works correctly.



FMB2YX Dual-SIM functionality can be achieved with one micro card and one soldered SIM chip. GPRS settings and Roaming Operators can be configured separately for SIM1 and SIM2. In *SIM2 Roaming/Home Operator* list home operator must be added to any part of the list to enable correct functionality. Dual SIM operator search functionality works the following way:

- SIM1 and SIM2 home operators have the highest priority;
- When device is connected to home operator, manual roaming operator search is disabled;
- When device is disconnected from home operator, operator search procedure is initiated as normal every 15 minutes;
- *SIM1 Roaming Operators* list has higher priority then *SIM2 Roaming Operator* list.
- When the device finds a new operator from SIM1/SIM2 lists - it switches to new SIM according to the list and connects to the new operator.

