

# Template:FMB640 Device Family Parameter list Reefer

## Reefer

- Reefer parameter configuration:

Name	Parameter				
	Priority	Operand	High level	Low level	Event only
Zone 1 Return Air Temperature 1	48270	48271	48272	48273	48274
Zone 1 Return Air Temperature 2	48310	48311	48312	48313	48314
Zone 1 Supply Air Temperature 1	48280	48281	48282	48283	48284
Zone 1 Supply Air Temperature 2	48320	48321	48322	48323	48324
Zone 1 Set Temperature	48290	48291	48292	48293	48294
Zone 2 Supply Air Temperature 1	48370	48371	48372	48373	48374
Zone 2 Return Air Temperature 1	48360	48361	48362	48363	48364
Zone 2 Set Temperature	48380	48381	48382	48383	48384
Ambient Air Temperature	48510	48511	48512	48513	48514
Compressor Coolant Temperature	48520	48521	48522	48523	48524
Compressor RPM	48540	48541	48542	48543	48544
Compressor Config	48550	48551	48552	48553	48554
Battery Voltage (V*10)	48210	48211	48212	48213	48214
Compressor Motor Work Minutes (HM)	48241	48241	48242	48243	48244
Reefer work Minutes (HMT)	48230	48231	48232	48233	48234
Electric Minutes (HME)	48220	48221	48222	48223	48224
Door Status	48560	48561	48562	48563	48564
Installation Serial	48570	48571	48572	48573	48574
Trailer Registration Number	48580	48581	48582	48583	48584
Error Count	48530	48530	48530	48530	48530
Alarm 1	48260	48261	48262	48263	48264
Alarm 2	48350	48351	48352	48353	48354
Alarm 3	48440	48441	48442	48443	48444