

Template:FMB640 Security info

In security section user can see SIM card and Configurator keyword security information.

- User can see SIM1 and SIM2 state and current status of active SIM card. If used SIM card with PIN code user can enter it here. How many attempts left to enter pin code is shown too.
- When SIM PIN code is entered correctly user can change or disable PIN code from SIM card. When SIM PIN is disabled and user want to enable it again user must enter last used PIN code.
- If device has two inserted SIM cards, user can change PIN code of both of them.
- For configuration security keyword can be set in Configurator. Keyword can be saved in configuration file (.cfg), so there is no need to connect the device to the configurator to configure keyword. Min. keyword length is 4 symbols and max. length is 10 symbols. Only uppercase, lowercase letters and numbers are supported. Keyword can be configured to .cfg configuration file when device is not connected to device.