

# Template:FMB910 Basic Parameter list

□

## Contents

- [1 System parameters](#)
- [2 GPRS parameters](#)
- [3 SMS/Call settings](#)
- [4 GSM operators](#)
- [5 Data acquisition mode parameters](#)
  - [5.1 Home Network GSM operator code "Vehicle on STOP" parameters](#)
  - [5.2 Home Network GSM operator code "Vehicle MOVING" parameters](#)
  - [5.3 Roaming Network GSM operator code "Vehicle on STOP" parameters](#)
  - [5.4 Roaming Network GSM operator code "Vehicle MOVING" parameters](#)
  - [5.5 Unknown Network GSM operator code "Vehicle on STOP" parameters](#)
  - [5.6 Unknown Network GSM operator code "Vehicle MOVING" parameters](#)
- [6 Features parameters](#)
  - [6.1 Green driving parameters](#)
  - [6.2 Overspeeding scenario parameters](#)
- [7 Trip/Odometer](#)
  - [7.1 Trip scenario parameters](#)
  - [7.2 Advanced trip scenario parameters](#)
  - [7.3 Odometer parameters](#)
- [8 AutoGeofencing scenario parameters](#)
- [9 Accelerometer features](#)
  - [9.1 Towing Detection](#)
- [10 Tracking on Demand](#)
- [11 I/O parameters](#)

## System parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
100	Uint8e	0	0	2	0 - Ignition 1 - Movement 2 - GPS	Movement source
106	Uint8	1	0	1	0 - Disable 1 - Enable	Static navigation
112	Uint8	1	0	1	1 - Movement 2 - Ignition 3 - Movement and Ignition	Static navigation source
107	Uint8	2	0	2	0 - After Position Fix 1 - Always 2 - After Time Sync	Send/Save records without TS
108	Uint8	1	0	1	0 - Disable 1 - Enable	LED Indication

<b>109</b>	Uint8	10	1	15	0 - Undefined 1 - Beidou only 2 - Glonass only 3 - Glonass and Beidou not allowed 4 - Galileo only 5 - Galileo and Beidou 6 - Galileo and Glonass 7 - Galileo, Glonass and Beidou not allowed 8 - Gps only 9 - Gps and Beidou 10 - Gps and Glonass 11 - Gps, Glonass and Beidou not allowed 12 - Gps and Galileo 13 - Gps, Galileo and Beidou 14 - Gps, Galileo and Glonass 15 - Gps, Galileo, Glonass and Beidou and not allowed	GNSS source
<b>110</b>	Uint8	0	0	1	0 - On need 1 - After ignition on	Battery charge mode

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>102</b>	Uint8	2	0	2	0 - Disable 1 - Gps sleep 2 - Deep sleep 3 - Online Deep sleep 4 - Ultra sleep	Sleep settings
<b>103</b>	Uint16	1	1	3000	Minutes	Timeout

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		

<b>101</b>	Uint8	4	1	14	1 - DIN 1 2 - Accelerometer 3 - Digital Input or Accelerometer 4 - Power Voltage 5 - Digital Input or Power Voltage 6 - Accelerometer or Power Voltage 7 - Digital Input, Accelerometer, or Power Voltage 8 - Engine RPM 9 - Digital Input or Engine RPM 10 - Accelerometer or Engine RPM 11 - Digital Input, Accelerometer or Engine RPM 12 - Power Voltage or Engine RPM 13 - Digital Input, Power Voltage or Engine RPM 14 - Accelerometer, Power Voltage or Engine RPM	Ignition settings
<b>104</b>	Uint16	30000	0	30000	mV	High voltage
<b>105</b>	Uint16	13200	0	29999	mV	Low voltage
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>19001</b>	Uint16	5	1	60	Seconds	Movement Start Delay
<b>19002</b>	Uint16	60	5	300	Seconds	Movement Stop Delay
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>900</b>	Uint8	1	0	3	0 - Gps only 1 - NITZ and NTP 2 - NTP 3 - NITZ	Synchronization settings
<b>901</b>	Uint8	0	0	24	Hours	NTP Resync
<b>902</b>	Char	"avl1.teltonika.lt"	0	55	String	NTP server 1
<b>903</b>	Char	"pool.ntp.org"	0	55	String	NTP server 2
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>169</b>	Uint8	2	0	2	0 - Disabled 1 - Once 2 - Continuous	Accelerometer Auto Calibration
<b>170</b>	Uint8	1	0	1	0 Disabled 1 Enabled	Gravity Filter
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>169</b>	Uint8	2	0	2	0 - Disabled 1 - Once 2 - Continuous	Accelerometer Auto Calibration
<b>170</b>	Uint8	1	0	1	0 Disabled 1 Enabled	Gravity Filter

# GPRS parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>1000</b>	Uint32	5	0	259200	Seconds	Open link timeout
<b>1001</b>	Uint16	30	5	300	Seconds	Response timeout
<b>1002</b>	Uint8	0	0	1	0 - Newest 1 - Oldest	Sort by
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>2000</b>	Uint8	1	0	1	0 - Disable 1 - Enable	GPRS context
<b>2001</b>	Char	""	0	32	String	APN
<b>2002</b>	Char	""	0	32	String	APN username
<b>2003</b>	Char	""	0	32	String	APN password
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>2004</b>	Char	""	0	55	String	Domain
<b>2005</b>	Uint16	0	0	65535	Number	Port
<b>2006</b>	Uint8	1	0	1	0 - TCP 1 - UDP	Protocol
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>2010</b>	Uint8	0	0	2	0 - Disable 1 - Backup 2 - Duplicate	Backup Server Mode
<b>2007</b>	Char	""	0	55	String	Backup Server Domain
<b>2008</b>	Uint16	0	0	65535	Number	Backup Server Port
<b>2009</b>	Uint8	0	0	1	0 - TCP 1 - UDP	Backup Server Protocol
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>13003</b>	Uint8	1	0	1	0 - Disable 1 - Enable	FOTA WEB Status
<b>13000</b>	Char	fm.teltonika.lt	0	55	String	FOTA WEB Domain
<b>13001</b>	Uint16	5000	0	65535	Number	FOTA WEB Port
<b>13002</b>	Uint16	720	30	65535	Number	FOTA WEB Period

# SMS/Call settings

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>3000</b>	Uint8	0	0	1	0 - Disable 1 - Enable	Allow SMS data sending
<b>3001</b>	Char	""	0	16	String	Data Send Number
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>3003</b>	Char	""	0	5	String	Login
<b>3004</b>	Char	""	0	5	String	Password
<b>3006</b>	Uint16	UTC+00:00	UTC-12:00 UTC+13:00		Time zone	SMS event Time Zone
Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		

<b>3005</b>	Uint8	0	0	4	0 - Do nothing 1 - Hangup 2 - Report position 3 - Spy call 4 - Auto answer	Incoming call action
<b>Parameter ID</b>	<b>Parameter Type</b>	<b>Default value</b>	<b>Value range</b>	<b>Value</b>	<b>Parameter name</b>	
<b>3007</b>	Uint8	0	0      7 (3 for FMB125)	0 - Disable 1 - DIN1 2 - Crash event 3 - DIN1 and Crash event 4 - DIN2 5 - DIN1 and DIN2 6 - DIN2 and Crash event 7 - DIN1, DIN2 and Crash event	0 - Disable 1 - DIN1 2 - Crash event 3 - DIN1 and Crash event 4 - DIN2 5 - DIN1 and DIN2 6 - DIN2 and Crash event 7 - DIN1, DIN2 and Crash event	Outgoing call trigger
<b>3008</b>	Uint8	0	0      10	GSM number	GSM number index	
<b>Parameter ID</b>	<b>Parameter Type</b>	<b>Default value</b>	<b>Value range</b>	<b>Value</b>	<b>Parameter name</b>	
<b>4000-4199</b>	Char	""	0      16	String	Authorized number	
<b>Parameter ID</b>	<b>Parameter Type</b>	<b>Default value</b>	<b>Value range</b>	<b>Value</b>	<b>Parameter name</b>	
<b>6000-6009</b>	Char	""	0      16	String	Predefined number	

## GSM operators

<b>Parameter ID</b>	<b>Parameter Type</b>	<b>Default value</b>	<b>Value range</b>		<b>Value</b>	<b>Parameter name</b>
			<b>Min</b>	<b>Max</b>		
<b>5000-5049</b>	Uint32	0	0	999999	Number	SIM1 roaming operator list
<b>9500-9549</b>	Uint32	0	0	999999	Number	SIM2 roaming/home operator list
<b>5500-5549</b>	Uint32	0	0	999999	Number	Operator blacklist

## Data acquisition mode parameters

### Home Network GSM operator code "Vehicle on STOP" parameters

<b>Parameter ID</b>	<b>Parameter Type</b>	<b>Default value</b>	<b>Value range</b>		<b>Parameter name</b>
			<b>Min</b>	<b>Max</b>	
<b>10000</b>	Uint16	3600	0	65535	Min Period
<b>10004</b>	Uint8	1	1	255	Min Saved Records
<b>10005</b>	Uint16	120	0	65535	Send Period

### Home Network GSM operator code "Vehicle MOVING" parameters

<b>Parameter ID</b>	<b>Parameter Type</b>	<b>Default value</b>	<b>Value range</b>		<b>Parameter name</b>
			<b>Min</b>	<b>Max</b>	
<b>10050</b>	Uint16	300	0	65535	Min Period
<b>10051</b>	Uint16	100	0	65535	Min Distance
<b>10052</b>	Uint8	10	0	180	Min Angle
<b>10053</b>	Uint8	10	0	100	Min Speed Delta

<b>10054</b>	Uint8	1	1	255	Min Saved Records
<b>10055</b>	Uint16	120	0	65535	Send Period

## Roaming Network GSM operator code "Vehicle on STOP" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
<b>10100</b>	Uint16	3600	0	65535	Min Period
<b>10104</b>	Uint8	1	1	255	Min Saved Records
<b>10105</b>	Uint16	0	0	65535	Send Period

## Roaming Network GSM operator code "Vehicle MOVING" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
<b>10150</b>	Uint16	300	0	65535	Min Period
<b>10151</b>	Uint16	100	0	65535	Min Distance
<b>10152</b>	Uint8	10	0	180	Min Angle
<b>10153</b>	Uint8	10	0	100	Min Speed Delta
<b>10154</b>	Uint8	1	1	255	Min Saved Records
<b>10155</b>	Uint16	0	0	65535	Send Period

## Unknown Network GSM operator code "Vehicle on STOP" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
<b>10200</b>	Uint16	3600	0	65535	Min Period
<b>10204</b>	Uint8	1	1	255	Min Saved Records
<b>10205</b>	Uint16	120	0	65535	Send Period

## Unknown Network GSM operator code "Vehicle MOVING" parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
<b>10250</b>	Uint16	300	0	65535	Min Period
<b>10251</b>	Uint16	100	0	65535	Min Distance
<b>10252</b>	Uint8	10	0	180	Min Angle
<b>10253</b>	Uint8	10	0	100	Min Speed Delta
<b>10254</b>	Uint8	1	1	255	Min Saved Records
<b>10255</b>	Uint16	0	0	65535	Send Period

## Features parameters

## Green driving parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11000</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
<b>11004</b>	Uint8	2.5	0.5	10	m/s <sup>2</sup>	Max acceleration
<b>11005</b>	Uint8	2.7	0.5	10	m/s <sup>2</sup>	Max braking
<b>11006</b>	Uint8	3.4	0.5	10	m/s <sup>2</sup>	Max cornering
<b>11007</b>	Uint8	0	0	1	0 - GPS 1 - Accelerometer	Source
<b>11008</b>	uint8	0	0	1	Enable/Disable	Duration
<b>11003</b>	Uint8	0	0	2 (1 for FMB125)	0 - None 1 - DOUT 1 2 - DOUT 2	Output control
<b>11001</b>	Int32	200	0	2147483647	Milliseconds	DOUT ON duration
<b>11002</b>	Int32	200	0	2147483647	Milliseconds	DOUT OFF duration
<b>7034</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8034</b>	String	"Green Driving"	0	160	Text	Sms text

## Overspeeding scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11100</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
<b>11104</b>	Uint16	90	0	260	km/h	Max speed
<b>11103</b>	Uint8	0	0	2 (1 for FMB125)	0 - None 1 - DOUT 1 2 - DOUT 2	Output control
<b>11101</b>	Int32	200	0	2147483647	Milliseconds	DOUT ON duration
<b>11102</b>	Int32	200	0	2147483647	Milliseconds	DOUT OFF duration
<b>7032</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8032</b>	String	"Overspeeding"	0	160	Text	Sms text

## Trip/Odometer

### Trip scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11800</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
<b>11801</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
<b>11802</b>	Uint8	0	0	1	0 - Continuous 1 - Between records	Mode
<b>11803</b>	Uint8	5	0	255	km/h	Start speed
<b>11804</b>	Uint16	60	0	65535	Seconds	Ignition off timeout
<b>7031</b>	Uint8	0	0	10	Phone number	Send SMS to

<b>8031</b>	String	"Trip"	0	160	Text	Sms text
-------------	--------	--------	---	-----	------	----------

## Advanced trip scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>700</b>	Uint16	100	0	65535	0 - Disable 1 - Enable	Eco score allowed events

## Odometer parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11806</b>	Uint8	0	0	2	0 - GNSS 1 - OBD 2 - LVCAN	Calculation source
<b>11807</b>	Uint32	0	0	4294967	Kilometer	Odometer Value

## AutoGeofencing scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>20000</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Priority
<b>20002</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
<b>20003</b>	Uint16	5	0	65535	Minutes	Activation timeout
<b>20001</b>	Uint8	0	0	2	0 - On exiting zone 1 - On entering zone 2 - On both	AutoGeofence event generating
<b>20005</b>	Uint8	0	0	5	0 - Power voltage 1 - Digital input 1	Deactivate by
					<b>20004</b> <b>7030</b>	Uint32      100      0 1000000      Value      Radius
						Uint64      0      0 10      Phone number      Send SMS to
					<b>8030</b>	String "AutoGeofence"      0 160      Text      Sms text

## Accelerometer features

### Towing Detection

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
<b>11600</b>	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Priority
<b>11601</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
<b>11602</b>	Uint16	5	0	65535	Minutes	Activation timeout
<b>11603</b>	Uint8	0	0	60	Seconds	Event timeout
<b>11604</b>	Uint8	0	0	10	Phone number	Make call to

<b>11605</b>	Double	0.22	0.1	5	mG	Threshold
<b>11606</b>	Double	1	0.1	5	Degrees	Angle
<b>11607</b>	Uint16	1000	1	5000	Milliseconds	Duration
<b>7035</b>	Uint8	0	0	10	Phone number	Send SMS to
<b>8035</b>	String	"Towing"	0	160	Text	Sms text

## Tracking on Demand

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
<b>10990</b>	Uint8	10	5	60	Tracking period
<b>10991</b>	Uint16	600	300	3600	Tracking duration

## I/O parameters

Parameter ID	Parameter Type	Default value	Value range		Parameter name
			Min	Max	
<b>50000</b>	Uint8	1	0	3	Ignition <a href="#">Priority</a>
<b>50001</b>	Uint8	5	0	6	Ignition <a href="#">Operand</a>
<b>50002</b>	Uint8	0	0	1	Ignition High level
<b>50003</b>	Uint8	0	0	1	Ignition Low level
<b>50004</b>	Uint8	0	0	1	Ignition <a href="#">Event only</a>
<b>50005</b>	Uint16	10	0	65535	Ignition Average
<b>7000</b>	Uint8	0	0	10	Send SMS
<b>8000</b>	String	0	0	160	SMS Text
<b>50010</b>	Uint8	1	0	3	Movement <a href="#">Priority</a>
<b>50011</b>	Uint8	5	0	6	Movement <a href="#">Operand</a>
<b>50012</b>	Uint8	0	0	1	Movement High level
<b>50013</b>	Uint8	0	0	1	Movement Low level
<b>50014</b>	Uint8	0	0	1	Movement <a href="#">Event only</a>
<b>50015</b>	Uint16	1	0	65535	Movement Average
<b>7001</b>	Uint8	0	0	10	Send SMS
<b>8001</b>	String	0	0	160	SMS Text
<b>50020</b>	Uint8	1	0	3	Data Mode <a href="#">Priority</a>
<b>50021</b>	Uint8	3	0	6	Data Mode Operand
<b>50022</b>	Uint8	0	0	5	Data Mode High level
<b>50023</b>	Uint8	0	0	5	Data Mode Low level
<b>50024</b>	Uint8	0	0	1	Data Mode <a href="#">Event only</a>
<b>7002</b>	Uint8	0	0	10	Send SMS
<b>8002</b>	String	0	0	160	SMS Text
<b>50030</b>	Uint8	1	0	3	GSM Signal <a href="#">Priority</a>
<b>50031</b>	Uint8	3	0	6	GSM Signal <a href="#">Operand</a>
<b>50032</b>	Uint8	0	0	5	GSM Signal High level
<b>50033</b>	Uint8	0	0	5	GSM Signal Low level
<b>50034</b>	Uint8	0	0	1	GSM Signal <a href="#">Event only</a>
<b>50035</b>	Uint16	1	0	65535	GSM Signal Average
<b>7003</b>	Uint8	0	0	10	Send SMS
<b>8003</b>	String	0	0	160	SMS Text
<b>50040</b>	Uint8	1	0	3	Deep Sleep <a href="#">Priority</a>
<b>50041</b>	Uint8	3	0	6	Deep Sleep <a href="#">Operand</a>
<b>50042</b>	Uint8	0	0	2	Deep Sleep High level
<b>50043</b>	Uint8	0	0	2	Deep Sleep Low level
<b>50044</b>	Uint8	0	0	1	Deep Sleep <a href="#">Event only</a>
<b>7004</b>	Uint8	0	0	10	Send SMS
<b>8004</b>	String	0	0	160	SMS Text
<b>50050</b>	Uint8	1	0	3	GNSS Status <a href="#">Priority</a>

<b>50051</b>	Uint8	3	0	6	GNSS Status <a href="#">Operand</a>
<b>50052</b>	Uint8	0	0	5	GNSS Status High level
<b>50053</b>	Uint8	0	0	5	GNSS Status Low level
<b>50053</b>	Uint8	0	0	1	GNSS Status <a href="#">Event only</a>
<b>7005</b>	Uint8	0	0	10	Send SMS
<b>8005</b>	String	0	0	160	SMS Text
<b>50060</b>	Uint8	0	0	3	GNSS PDOP <a href="#">Priority</a>
<b>5061</b>	Uint8	3	0	6	GNSS PDOP <a href="#">Operand</a>
<b>5062</b>	Uint16	0	0	1000	GNSS PDOP High level
<b>5063</b>	Uint16	0	0	1000	GNSS PDOP Low level
<b>5064</b>	Uint8	0	0	1	GNSS PDOP <a href="#">Event only</a>
<b>5065</b>	Uint16	10	0	65535	GNSS PDOP Average
<b>7006</b>	Uint8	0	0	10	Send SMS
<b>8006</b>	String	0	0	160	SMS Text
<b>50070</b>	Uint8	1	0	3	GNSS HDOP <a href="#">Priority</a>
<b>50071</b>	Uint8	3	0	6	GNSS HDOP <a href="#">Operand</a>
<b>50072</b>	Uint16	0	0	1000	GNSS HDOP High level
<b>50073</b>	Uint16	0	0	1000	GNSS HDOP Low level
<b>50074</b>	Uint8	0	0	1	GNSS HDOP <a href="#">Event only</a>
<b>50075</b>	Uint16	10	0	65535	GNSS HDOP Average
<b>7007</b>	Uint8	0	0	10	Send SMS
<b>8007</b>	String	0	0	160	SMS Text
<b>50080</b>	Uint8	1	0	3	External Voltage <a href="#">Priority</a>
<b>50081</b>	Uint8	6	0	6	External Voltage <a href="#">Operand</a>
<b>50082</b>	Uint16	1000	0	60000	External Voltage High level
<b>50083</b>	Uint16	0	0	60000	External Voltage Low level
<b>50084</b>	Uint8	0	0	1	External Voltage <a href="#">Event only</a>
<b>50085</b>	Uint16	10	0	65535	External Voltage Average
<b>7008</b>	Uint8	0	0	10	Send SMS
<b>8008</b>	String	0	0	160	SMS Text
<b>50090</b>	Uint8	1	0	3	Speed <a href="#">Priority</a>
<b>50091</b>	Uint8	3	0	6	Speed <a href="#">Operand</a>
<b>50092</b>	Uint16	0	0	300	Speed High level
<b>50093</b>	Uint16	0	0	300	Speed Low level
<b>50094</b>	Uint8	0	0	1	Speed <a href="#">Event only</a>
<b>50095</b>	Uint16	1	0	65535	Speed Average
<b>7009</b>	Uint8	0	0	10	Send SMS
<b>8009</b>	String	0	0	160	SMS Text
<b>50100</b>	Uint8	0	0	3	GSM Cell ID <a href="#">Priority</a>
<b>50101</b>	Uint8	3	0	6	GSM Cell ID <a href="#">Operand</a>
<b>50102</b>	Uint32	0	0	999999	GSM Cell ID High level
<b>50103</b>	Uint32	0	0	999999	GSM Cell ID Low level
<b>50104</b>	Uint8	0	0	1	GSM Cell ID <a href="#">Event only</a>
<b>7010</b>	Uint8	0	0	10	Send SMS
<b>8010</b>	String	0	0	160	SMS Text
<b>50110</b>	Uint8	0	0	3	GSM Area Code <a href="#">Priority</a>
<b>50111</b>	Uint8	3	0	6	GSM Area Code <a href="#">Operand</a>
<b>50112</b>	Uint32	0	0	999999	GSM Area Code High level
<b>50113</b>	Uint32	0	0	999999	GSM Area Code Low level
<b>50114</b>	Uint8	0	0	1	GSM Area Code <a href="#">Event only</a>
<b>7011</b>	Uint8	0	0	10	Send SMS
<b>8011</b>	String	0	0	160	SMS Text
<b>50120</b>	Uint8	1	0	3	Battery Voltage <a href="#">Priority</a>
<b>50121</b>	Uint8	3	0	6	Battery Voltage <a href="#">Operand</a>
<b>50122</b>	Uint16	0	0	5000	Battery Voltage High level
<b>50123</b>	Uint16	0	0	5000	Battery Voltage Low level
<b>50124</b>	Uint8	0	0	1	Battery Voltage <a href="#">Event only</a>
<b>50125</b>	Uint8	0	0	10	Battery Voltage Average

<b>7012</b>	Uint8	0	0	10	Send SMS
<b>8012</b>	String	0	0	160	SMS Text
<b>50130</b>	Uint8	1	0	3	Battery Current <a href="#">Priority</a>
<b>50131</b>	Uint8	3	0	6	Battery Current <a href="#">Operand</a>
<b>50132</b>	Uint16	0	0	5000	Battery Current High level
<b>50133</b>	Uint16	0	0	5000	Battery Current Low level
<b>50134</b>	Uint8	0	0	1	Battery Current <a href="#">Event only</a>
<b>50135</b>	Uint8	0	0	10	Battery Current Average
<b>7013</b>	Uint8	0	0	10	Send SMS
<b>8013</b>	String	0	0	160	SMS Text
<b>50140</b>	Uint8	0	0	3	Active GSM Operator <a href="#">Priority</a>
<b>50141</b>	Uint8	3	0	6	Active GSM Operator <a href="#">Operand</a>
<b>50142</b>	Uint32	0	0	999999	Active GSM Operator High level
<b>50143</b>	Uint32	0	0	999999	Active GSM Operator Low level
<b>50144</b>	Uint8	0	0	1	Active GSM Operator <a href="#">Event only</a>
<b>7014</b>	Uint8	0	0	10	Send SMS
<b>8014</b>	String	0	0	160	SMS Text
<b>50150</b>	Uint8	0	0	3	Trip Odometer <a href="#">Priority</a>
<b>50151</b>	Uint8	3	0	6	Trip Odometer <a href="#">Operand</a>
<b>50152</b>	Uint32	0	0	1000000	Trip Odometer High level
<b>50153</b>	Uint32	0	0	1000000	Trip Odometer Low level
<b>50154</b>	Uint8	0	0	1	Trip Odometer <a href="#">Event only</a>
<b>7015</b>	Uint8	0	0	10	Send SMS
<b>8015</b>	String	0	0	160	SMS Text
<b>50160</b>	Uint8	0	0	3	Total Odometer <a href="#">Priority</a>
<b>50161</b>	Uint8	3	0	6	Total Odometer <a href="#">Operand</a>
<b>50162</b>	Uint32	0	0	10000000	Total Odometer High level
<b>50163</b>	Uint32	0	0	10000000	Total Odometer Low level
<b>50164</b>	Uint8	0	0	1	Total Odometer <a href="#">Event only</a>
<b>7016</b>	Uint8	0	0	10	Send SMS
<b>8016</b>	String	0	0	160	SMS Text
<b>50170</b>	Uint8	0	0	3	Digital Input 1 <a href="#">Priority</a>
<b>50171</b>	Uint8	3	0	6	Digital Input 1 <a href="#">Operand</a>
<b>50172</b>	Uint8	0	0	1	Digital Input 1 High level
<b>50173</b>	Uint8	0	0	1	Digital Input 1 Low level
<b>50174</b>	Uint8	0	0	1	Digital Input 1 <a href="#">Event only</a>
<b>50175</b>	Uint16	1	0	65535	Digital Input 1 Average
<b>7017</b>	Uint8	0	0	10	Send SMS
<b>8017</b>	String	0	0	160	SMS Text
<b>50180</b>	Uint8	0	0	3	Analog Input 1 <a href="#">Priority</a>
<b>50181</b>	Uint8	3	0	6	Analog Input 1 <a href="#">Operand</a>
<b>50182</b>	Uint16	0	0	30000	Analog Input 1 High level
<b>50183</b>	Uint16	0	0	30000	Analog Input 1 Low level
<b>50184</b>	Uint8	0	0	1	Analog Input 1 <a href="#">Event only</a>
<b>50185</b>	Uint16	10	0	65535	Analog Input 1 Average
<b>7018</b>	Uint8	0	0	10	Send SMS
<b>8018</b>	String	0	0	160	SMS Text
<b>50190</b>	Uint8	0	0	3	Digital Output 1 <a href="#">Priority</a>
<b>50191</b>	Uint8	0	0	6	Digital Output 1 <a href="#">Operand</a>
<b>50192</b>	Uint8	0	0	1	Digital Output 1 High level
<b>50193</b>	Uint8	0	0	1	Digital Output 1 Low level
<b>50194</b>	Uint8	0	0	1	Digital Output 1 <a href="#">Event only</a>
<b>50195</b>	Uint16	1	0	65535	Digital Output 1 Average
<b>7019</b>	Uint8	0	0	10	Send SMS
<b>8019</b>	String	0	0	160	SMS Text
<b>50220</b>	Uint8	0	0	3	Axis X <a href="#">Priority</a>
<b>50221</b>	Uint8	3	0	6	Axis X <a href="#">Operand</a>
<b>50222</b>	Uint16	0	-8000	8000	Axis X High level

<b>50223</b>	Uint16	0	-8000	8000	Axis X Low level
<b>50224</b>	Uint8	0	0	1	Axis X <a href="#">Event only</a>
<b>50225</b>	Uint16	1	0	65535	Axis X Average
<b>7022</b>	Uint8	0	0	10	Send SMS
<b>8022</b>	String	0	0	160	SMS Text
<b>50230</b>	Uint8	0	0	3	Axis Y <a href="#">Priority</a>
<b>50231</b>	Uint8	3	0	6	Axis Y <a href="#">Operand</a>
<b>50232</b>	Uint16	0	-8000	8000	Axis Y High level
<b>50233</b>	Uint16	0	-8000	8000	Axis Y Low level
<b>50234</b>	Uint8	0	0	1	Axis Y <a href="#">Event only</a>
<b>50235</b>	Uint16	1	0	65535	Axis Y Average
<b>7023</b>	Uint8	0	0	10	Send SMS
<b>8023</b>	String	0	0	160	SMS Text
<b>50240</b>	Uint8	0	0	3	Axis Z <a href="#">Priority</a>
<b>50241</b>	Uint8	3	0	6	Axis Z <a href="#">Operand</a>
<b>50242</b>	Uint16	0	-8000	8000	Axis Z High level
<b>50243</b>	Uint16	0	-8000	8000	Axis Z Low level
<b>50244</b>	Uint8	0	0	1	Axis Z <a href="#">Event only</a>
<b>50245</b>	Uint16	1	0	65535	Axis Z Average
<b>7024</b>	Uint8	0	0	10	Send SMS
<b>8024</b>	String	0	0	160	SMS Text
<b>50250</b>	Uint8	0	0	3	ICCID <a href="#">Priority</a>
<b>50251</b>	Uint8	3	0	6	ICCID <a href="#">Operand</a>
<b>50254</b>	Uint8	0	0	1	ICCID <a href="#">Event only</a>
<b>7069</b>	Uint8	0	0	10	Send SMS
<b>8069</b>	String	0	0	160	SMS Text
<b>50510</b>	Uint8	0	0	3	Eco Score <a href="#">Priority</a>
<b>50511</b>	Uint8	3	0	6	Eco Score <a href="#">Operand</a>
<b>50512</b>	Uint8	0	0	1	Eco Score High level
<b>50513</b>	Uint8	0	0	1	Eco Score Low level
<b>50514</b>	Uint8	0	0	1	Eco Score <a href="#">Event only</a>
<b>7220</b>	Uint8	0	0	10	Send SMS
<b>8220</b>	String	0	0	160	SMS Text
<b>50690</b>	Uint8	0	0	3	Battery level % <a href="#">Priority</a>
<b>50691</b>	Uint8	0	0	6	Battery level % <a href="#">Operand</a>
<b>50692</b>	Uint8	0	0	100	Battery level % High level
<b>50693</b>	Uint8	0	0	100	Battery level % Low level
<b>50694</b>	Uint8	0	0	1	Battery level % <a href="#">Event only</a>
<b>50695</b>	Uint16	1	0	65535	Battery level % Average
<b>7243</b>	Uint8	0	0	10	Send SMS
<b>8243</b>	String	0	0	160	SMS Text
<b>51730</b>	Uint8	0	0	3	ISO6709 Coordinates <a href="#">Priority</a>
<b>51731</b>	Uint8	3	0	6	ISO6709 Coordinates <a href="#">Operand</a>
<b>51734</b>	Uint8	0	0	2	ISO6709 Coordinates <a href="#">Event only</a>
<b>7376</b>	Uint8	0	0	10	Send SMS
<b>8376</b>	String	0	0	160	SMS Text