

# Template:FMB96X First start card



**Special and smart tracker with wide power supply range and high capacity internal Ni-MH battery**



## Contents

- [1 How to insert Micro-SIM card](#)

## How to insert Micro-SIM card

1. Gently remove FMB96X **cover** using **plastic pry tool** from both sides.
2. Insert **Micro-SIM** card as shown with **PIN request disabled** or read [Security info](#) how to enter it later in Configurator. Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot.
3. Attach device **cover** back.
4. Device is ready to be connected.

1. Gently remove FMB96X **cover** using **plastic pry tool** from both sides.
2. Insert **Micro-SIM** card as shown with **PIN request disabled** or read [Security info](#) how to enter it later in Configurator. Make sure that Micro-SIM card **cut-off corner** is pointing forward to slot.
3. Connect the battery as shown on device. Position the battery in place where it does not obstruct other components.
4. Attach device **cover** back. Device is ready to be connected.



**Note: Micro-SIM card insertion/removal must be performed when device is powered off**

- **external voltage and battery are disconnected. Otherwise Micro-SIM card might be damaged or device will not detect it.**