

# Template:FMB OBD Device Family Features Parameter list

## Green driving parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
11000	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
11004	Uint8	2.5	0.5	10	m/s <sup>2</sup>	Max acceleration
11005	Uint8	2.7	0.5	10	m/s <sup>2</sup>	Max braking
11006	Uint8	3.4	0.5	10	m/s <sup>2</sup>	Max cornering
11007	Uint8	0	0	1	0 - GPS 1 - Accelerometer	Source
11008	uint8	0	0	1	Enable/Disable	Duration
11003	Uint8	0	0	2 (1 for FMB125)	0 - None 1 - DOUT 1 2 - DOUT 2	Output control
11001	Int32	200	0	2147483647	Milliseconds	DOUT ON duration
11002	Int32	200	0	2147483647	Milliseconds	DOUT OFF duration
7034	Uint8	0	0	10	Phone number	Send SMS to
8034	String	"Green Driving"	0	160	Text	Sms text

## Overspeeding scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
11100	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings
11104	Uint16	90	0	260	km/h	Max speed
11103	Uint8	0	0	2 (1 for FMB125)	0 - None 1 - DOUT 1 2 - DOUT 2	Output control
11101	Int32	200	0	2147483647	Milliseconds	DOUT ON duration
11102	Int32	200	0	2147483647	Milliseconds	DOUT OFF duration
7032	Uint8	0	0	10	Phone number	Send SMS to
8032	String	"Overspeeding"	0	160	Text	Sms text

## Jamming scenario parameters

Parameter ID	Parameter Type	Default value	Value range		Value	Parameter name
			Min	Max		
11300	Uint8	0	0	3	0 - Disable 1 - Low priority 2 - High priority 3 - Panic priority	Scenario settings

<b>11303</b>	Uint8	1	0	1	0 - Disable 1 - Enable	Eventual records
<b>11304</b>	Uint8	0	0	2 (1 for FMB125)	0 - None 1 - DOUT1 2 - DOUT2	Output control
<b>11301</b>	Int32	200	0	2147483647	Milliseconds	DOUT ON duration
<b>11302</b>	Int32	200	0	2147483647	Milliseconds	DOUT OFF duration
<b>11305</b>	Uint16	60	0	65535	Seconds	Timeout